

Features

The Sony SRS-PC3DW is a compact-size woofer equipped with a built-in power amplifier. This woofer is designed for use with your speaker equipped with a built-in power amplifier to produce a dynamic sound of 25W output.

- The magnetically shielded design of the speaker should have little effect on a PC monitor or recorded tapes, etc. when placed close to them.
- The TURN OVER control to adjust the point where the bass level of the woofer and the connected speaker are balanced.

Precautions

On operating voltage

Operate the unit only on 120V AC, 60Hz.

On safety

- The nameplate indicating operating voltage, power consumption, etc. is located on the rear exterior of the woofer.
- Unplug the unit from the wall outlet when it is not to be used for an extended period of time. To disconnect the cord, pull it out by grasping the plug. Never pull it out by the cord.
- Should any solid object or liquid fall into the unit, disconnect the AC power cord, and have the unit checked by qualified personnel before operating it any further.

On installation

- Do not leave the unit in a location near heat sources, moisture, rain, or mechanical shock.
- Although this speaker system is magnetically shielded, do not leave recorded tapes, watches, personal credit cards, or floppy disks using magnetic coding in front of the unit for an extended period for precaution.

On cleaning the cabinet

Clean the cabinet with a soft cloth slightly moistened with water or mild detergent solution. Do not use alcohol, benzine, or thinner as they may mar the finish.

If the TV picture or monitor display is magnetically distorted

Although this woofer is magnetically shielded, there may be cases that the picture on some TV sets/personal computer sets may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer set once, and after 15 to 30 minutes turn it on again. For the personal computer set, take the appropriate measures such as data storage before turning it off. **When there seems to be no improvement**, locate the woofer further away from the TV set/personal computer set. Furthermore, be sure not to place objects in which magnets are attached or used near the TV set/personal computer set, such as audio racks, TV stands, toys, etc. These may cause magnetic distortion to the picture due to their interaction with the woofer.

If you have any questions or problems concerning your system that are not covered in this manual, please consult your nearest Sony dealer.

Troubleshooting

Should any problem persist after you have made the following checks, consult your nearest Sony service facility.

Trouble	Cause and/or remedy
No sound at all	Connect the AC power cord to a wall outlet. Set the POWER switch to ON. Turn the VOLUME control clockwise. Increase the sound volume with the volume control on the connected equipment. Check the connected equipment. <ul style="list-style-type: none"> • Is the equipment turned on? • Is operation of the connected equipment correct?
No sound but bass sound	Check to see if the active speaker is connected correctly
Distortion	Turn down the volume of the connected equipment. Turn down the VOLUME control.

Specifications

Amplifier section

Rated output	25 W
Input	INPUT 1 (rear): Phono jacks INPUT 2 (rear): Stereo mini jack INPUT 3 (front): Stereo mini jack
Output	Impedance 4.7 kilohm (1 kHz) AUDIO OUT (Stereo mini jack) Impedance 22 ohm (1kHz)

Speaker section

System	Low-range, bass-reflex type
Speaker unit	Magnetically shielded, 90 mm (3 5/8 in.) dia.
Nominal impedance	4 ohm
Speaker sensitivity	83 dB/Wm

General

Power requirements	120 V AC, 60 Hz
Power consumption	25 W
Dimensions	Approx. 132 mm x 271 mm x 222 mm (w/h/d) (5 1/4 x 10 3/4 x 8 3/4 in.) not including projecting parts and controls
Mass	Approx. 2.7 kg (5lb. 15 oz)
AC cord length	2 m (78 3/8 in.)

Supplied accessories

Connecting cord (stereo mini plug ↔ two phono plugs, 2 m) (1)

Please ask the dealer for detailed information about the optional accessories available in your country.

Design and specifications are subject to change without notice.

SONY

3-858-430-21(1)

Active Super Woofer

Operating Instructions


Before operating the unit, please read this manual thoroughly and retain it for future reference.

SRS-PC3DW

Sony Corporation © 1996 Printed in Japan

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

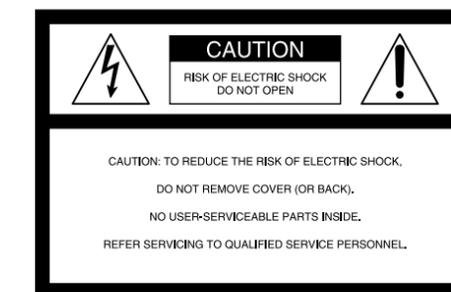

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Owner's Record


The model and serial numbers are located at the rear of the woofer. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. SRS-PC3DW

Serial No. _____

Connections

Connecting to the active speaker with output for woofer (SRS-PC41/PC51/PC71 etc.)

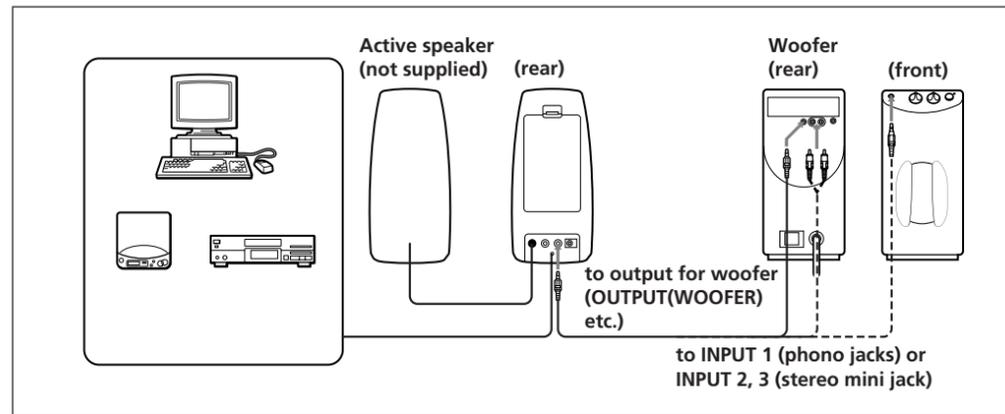


You can adjust the volume of the woofer which is linked to the volume of the connected active speaker.

When connecting to the INPUT 2, 3

Use the connecting cord (Stereo mini plug ↔ Stereo mini plug) (not supplied).

Connecting to the active speaker without output for woofer (SRS-PC21 etc.)

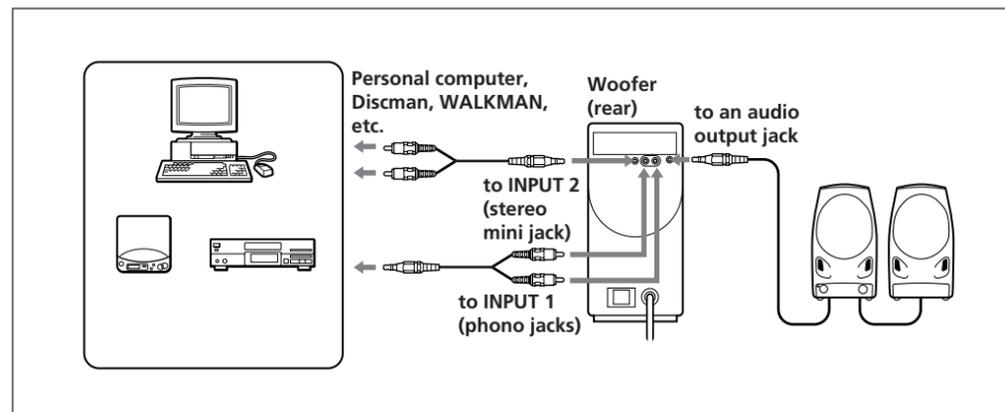

When the speaker is connected to a monaural jack, the sound may not come through the right connected speaker. When you use the optional Sony plug adaptor PC-236HG, sound will come through both connected speakers.


Connecting to a stereo phono type headphones jack

Use the optional RK-G138HG connecting cord.


Notes

- You can connect phono and stereo mini plugs to the INPUT 1, 2 and 3 jacks. If you use these types of jacks at the same time, you will have to adjust the volume of the components because you will get the sound from all of them.
- If your personal computer does not have audio output jacks, you will have to install a sound board, etc. Consult qualified personnel for details.

Power Source

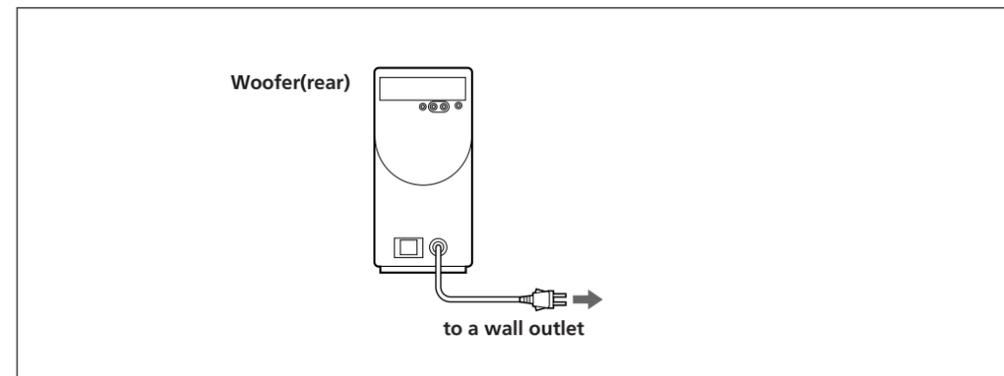

How to Use

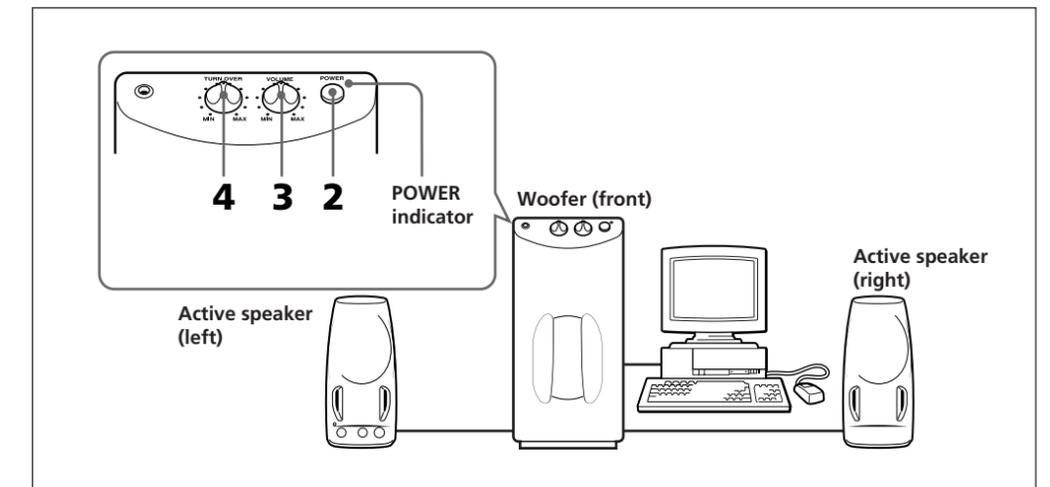

1 Turn the active speaker on.

2 Press the POWER switch (ON).

The POWER indicator lights up.

3 Adjust the volume with the VOLUME control.

Adjust the balance of the volume between the woofer and the active speaker.

4 Use the TURN OVER control to find the point where the bass level of the woofer and the connected active speaker are well balanced.

When connecting to the active speaker with output for woofer

If the volume is adjusted once, the volume of the woofer is adjusted automatically as it is linked to the volume level of the active speaker.

When connecting to the active speaker without output for woofer

Adjust the volume of the active speaker and the woofer.

Playing the active speaker

See the operating instructions of the active speaker.

After listening, press the POWER switch (OFF). The POWER indicator goes off.