

SONY[®]

3-858-505-12 (1)

Video Cassette Player

Operating Instructions

VHS

 

SLV-KA175PK
SLV-KA185PK
SLV-KF285PK Hi-Fi

—
©1996 by Sony Corporation

SLV-KA175PK/KA185PK/KF285PK 3-858-505-12 (1)

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

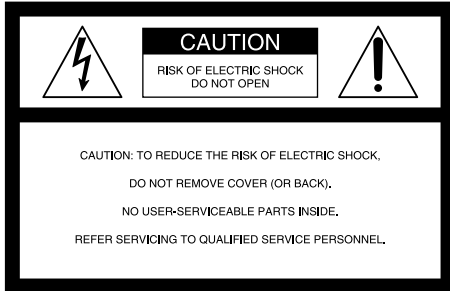

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Precautions

Safety

- Operate the unit on 110 – 240 V AC, 50/60 Hz.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- Unplug the unit from the wall outlet if you do not intend to use it for an extended period of time. To disconnect the cord, pull it out by the plug, never by the cord.

Installing

- Allow adequate air circulation to prevent internal heat buildup.
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation slots.
- Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.

- Keep the unit and cassettes away from equipment with strong magnets, such as microwave ovens or large loudspeakers.
- Do not place heavy objects on the unit.
- If the unit is brought directly from a cold to a warm location, moisture may condense inside the unit and cause damage to the video head and tape. When you first install the unit, or when you move it from a cold to a warm location, wait for about one hour before operating the unit.

Caution

Television programs, films, video tapes and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws. Also, use of this unit with cable television transmission may require authorization from the cable television transmission and/or program owner.

Table of contents

Getting Started

- 4 Step 1: Unpacking
- 5 Step 2: Setting up the remote commander
- 6 Step 3: Hookups

Getting Started

Basic Operations

- 11 Playing a tape

Additional Operations

- 14 Playing/searching at various speeds
- 16 Karaoke sing-along
- 19 Adjusting the picture
- 20 Editing with another VCR

Additional Information

- 22 General setup information
- 23 Troubleshooting
- 25 Specifications
- 26 Index to parts and controls

Back cover


- Index

Step 1


Unpacking

Check that you have received the following items with the unit:


- Remote commander

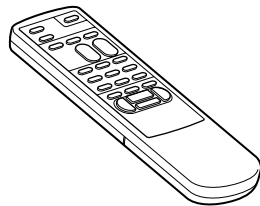


- AC power cord

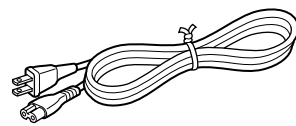


- Size AA (R6) batteries

 


- Microphone

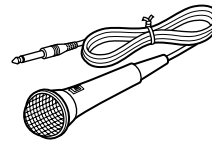

- 75-ohm coaxial cable with F-type connectors

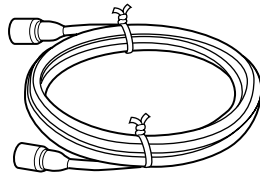

- Audio/video cable (3-phono to 3-phono) (SLV-KF285PK only)

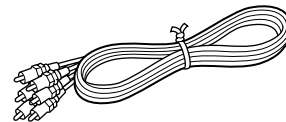

Checking your model name


The instructions in this manual are for the 3 models: SLV-KA175PK, KA185PK, and KF285PK. Check your model number by looking at the rear panel of your unit. The SLV-KA185PK is the model used for illustration purposes. Any difference in operation is clearly indicated in the text, for example, "SLV-KF285PK only."

Step 2

Setting up the remote commander


Inserting the batteries

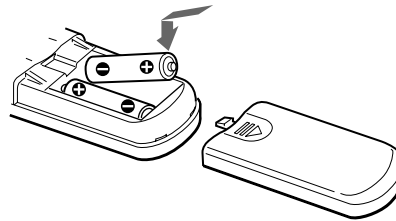

Insert two R6 (size AA) batteries by matching the + and - on the batteries to the diagram inside the battery compartment.



Using the remote commander

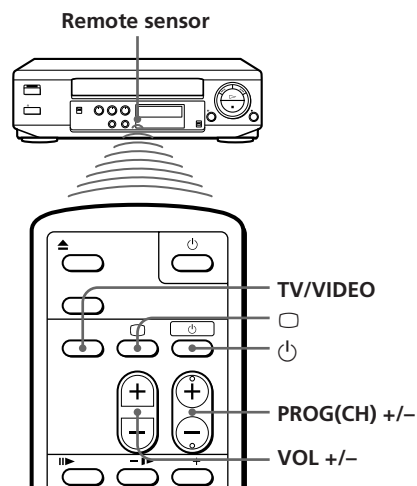You can use this remote commander to operate the unit and a Sony TV. To operate this unit, point at the remote sensor on the unit. To operate the TV, point at the remote sensor on the TV.



To	Press
Turn the TV to standby or active mode	
Turn on the TV power	
Increase (+) or decrease (-) the TV volume	VOL +/-
Change the TV channel	PROG(CH) +/-
Select an input source of the TV either from antenna in or from line in TV/VIDEO	TV/VIDEO

Notes

- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not mix different types of batteries.

Step 3

Hookups

Selecting the hookup

There are basically two ways to hookup this unit depending on whether your TV has audio/video inputs or not.

If your TV has audio/video inputs

See "Audio/video (A/V) hookup" on pages 7 and 8.

If your TV doesn't have audio/video inputs

See "Antenna hookup" on pages 9 and 10.

Before you get started

- Turn off the power to all equipment.
- Do not connect the AC power cords until all of the connections are completed.
- Be sure you make connections firmly. Loose connections may cause picture distortion.
- If your TV doesn't match any of the examples provided, see your nearest Sony dealer or qualified technician.

Audio/video (A/V) hookup

If your TV has audio/video (A/V) input jacks, you will get a better picture and sound if you hook up your unit using these connections.

For SLV-KF285PK, you should also connect the audio outputs of your unit or TV to your stereo system for a true “home theater” experience.


You’re finished setting up the unit after you’ve made the connections.

If your TV doesn’t have A/V inputs, see page 9 for antenna hookup.

(For SLV-KA175PK/KA185PK)


A Use this hookup if your TV has stereo jacks

(e.g. SLV-KA185PK)

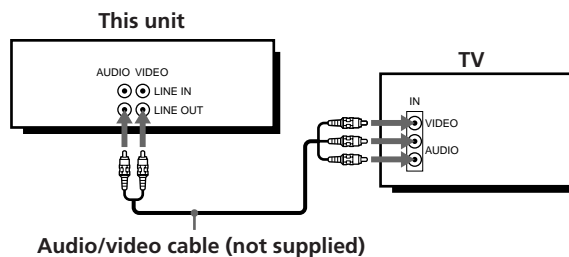

B Use this hookup if your TV doesn't have stereo jacks

(e.g. SLV-KA185PK)

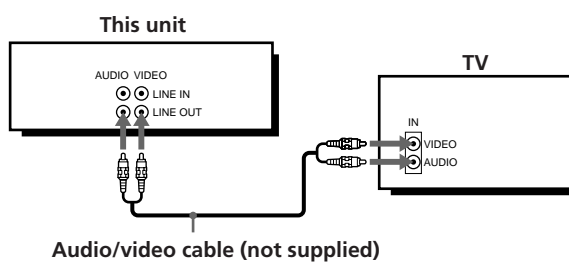


continued


Step 3: Hookups (continued)

(For SLV-KF285PK)

A Use this hookup if your TV has stereo jacks

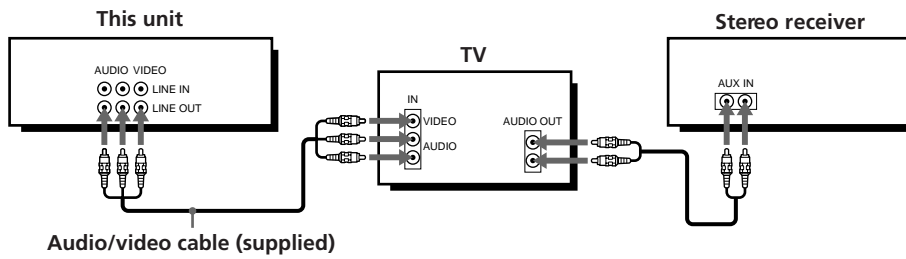

B Use this hookup if your TV doesn't have stereo jacks

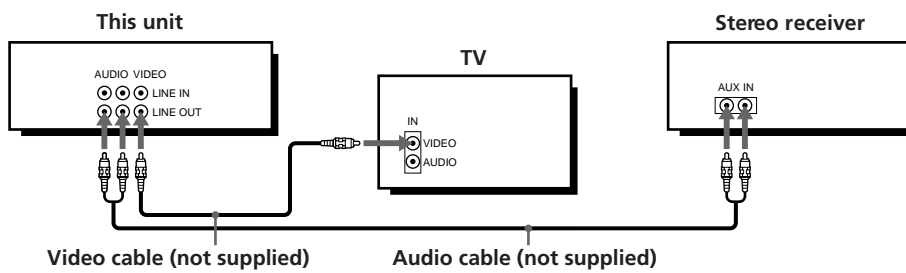

Note (SLV-KF285PK only)


- To play a tape in stereo, you must use the A/V connection.

Antenna hookup


Make the following connections if your TV doesn't have A/V inputs.

A Use this hookup if you're using:

- VHF/UHF antenna (you get channels 2–13 and channels 14 and higher)
- UHF-only antenna (you get channels 14 and higher)
- Separate VHF and UHF antennas

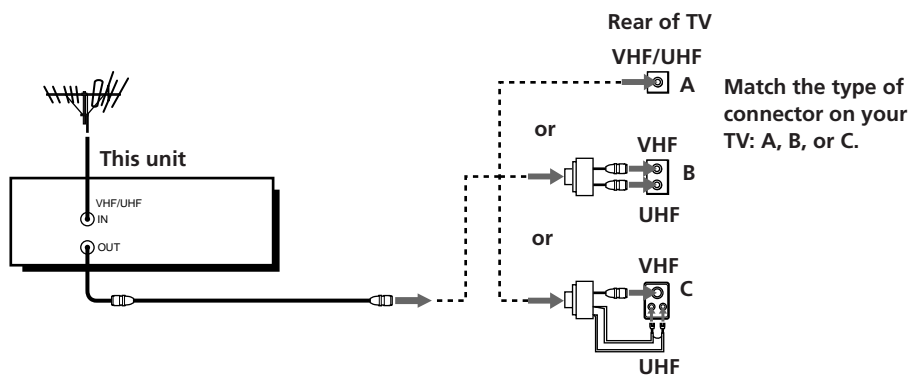

B Use this hookup if you're using a VHF-only antenna (you get channels 2–13 only)

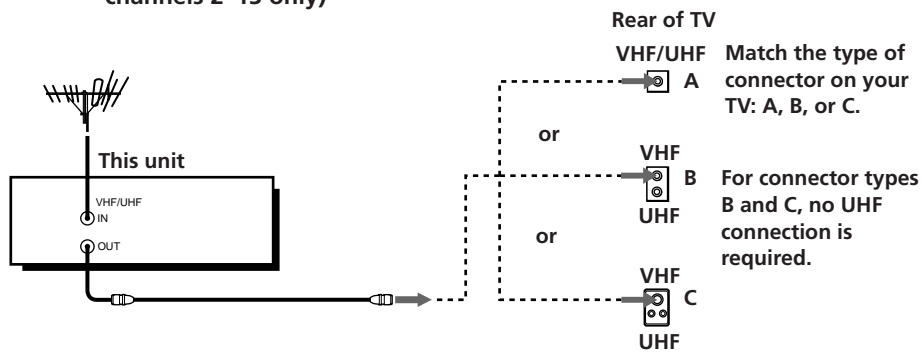

If you cannot connect your antenna cable to the unit directly


If your antenna cable is a flat cable (300-ohm twin lead cable), attach an external antenna connector (not supplied) so you can connect the cable to the VHF/UHF IN connector. If you have separate cables for VHF and UHF antennas, you should use a U/V band mixer (not supplied). For details, see page 22.

continued


Antenna hookup: Video cassette player setup

When connecting the unit to the TV using only the antenna cable, you must set the RF UNIT switch on the rear of the unit so that the TV can receive the correct signal from the unit.

- 1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.
- 2 Insert a recorded tape into the tape compartment.
(SLV-KA175PK)
The unit turns on and starts playing automatically.
(SLV-KA185PK/KF285PK)
The unit turns on and starts playing automatically if you insert a tape with its safety tab removed.
- 3 Press TV/VTR to turn on the TV/VTR indicator in the display window.
- 4 Press ▷ PLAY (if playback didn't start in step 2).
- 5 Turn on your TV and set it to the channel you selected in step 1 (channel 3 or 4).
The video playback picture will be clearly displayed on the TV screen.
Whenever you use the unit, set the TV to the channel selected in step 1.

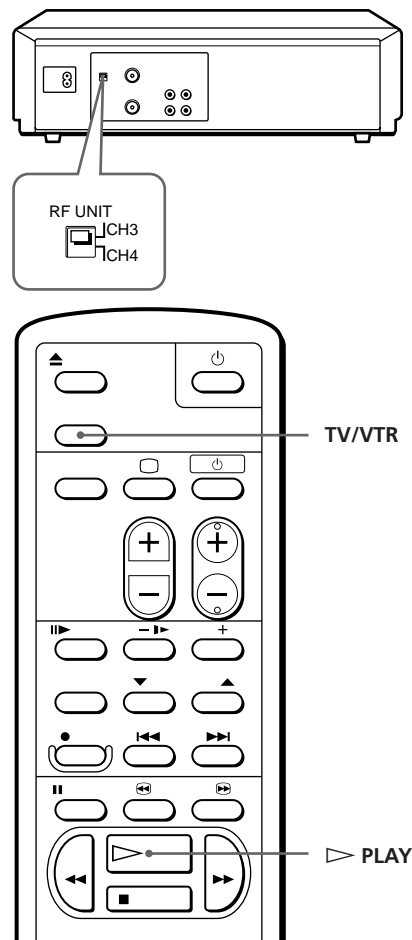


Playing a tape

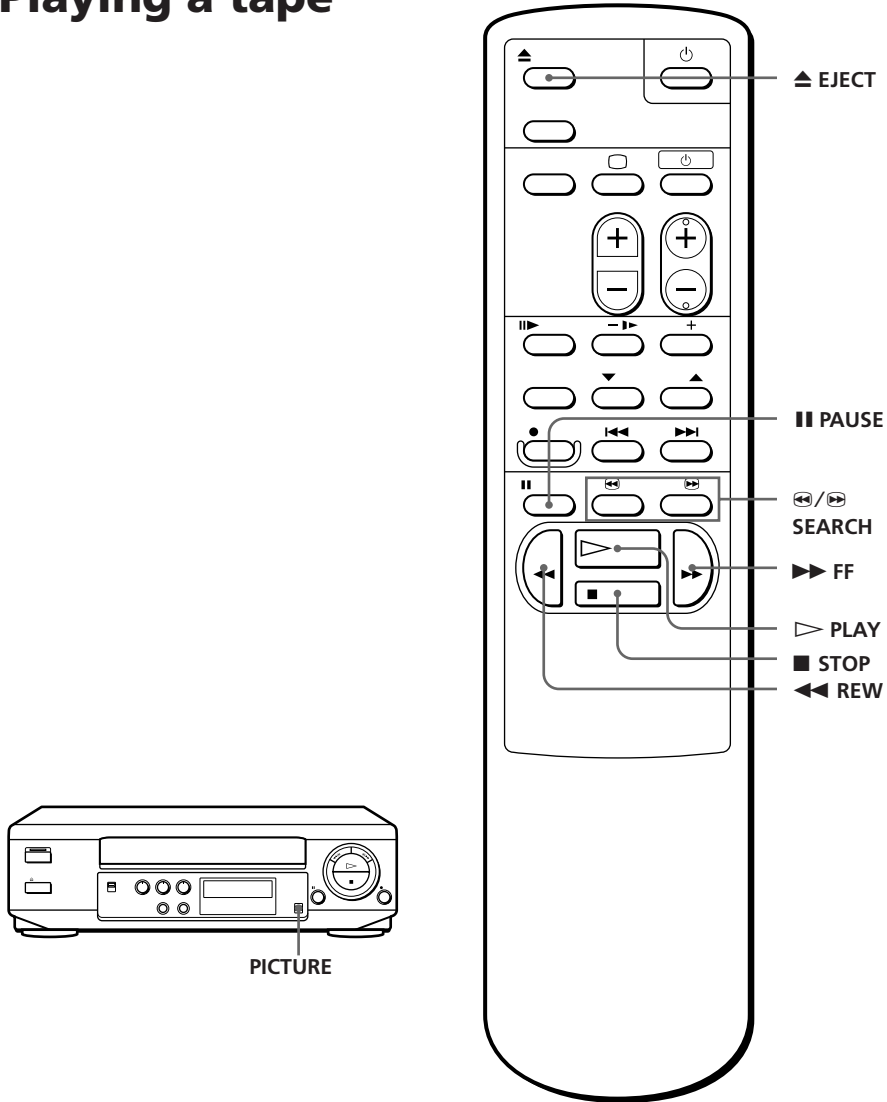

1 Turn on your TV and set it to the video channel.

 2 Insert a tape.
(SLV-KA175PK)
The unit turns on, and starts playing automatically.



continued

Playing a tape (continued)

(SLV-KA185PK/KF285PK)

The unit turns on, and starts playing automatically if you insert a tape with its safety tab removed.

3



Press ▷ PLAY (if playback didn't start in step 2).

When the tape reaches the end, it will rewind automatically.

Additional tasks


To	Press
Stop play	■ STOP
Pause play	PAUSE
Resume play after pause	PAUSE or ▷ PLAY
Search forward	▶▶ FF or 🔍 SEARCH during playback
Search backward	◀◀ REW or 🔍 SEARCH during playback
Fast-forward the tape	▶▶ FF during stop
Rewind the tape	◀◀ REW during stop
Eject the tape	▲ EJECT

Watching a rental tape

Set PICTURE on the unit to RENTAL PICTURE. Noise will be reduced on the playback picture. After watching the rental tape, set the switch back to NORMAL.

Selecting the sound during playback (SLV-KF285PK only)

Press AUDIO MONITOR to select the desired sound. Each press of the button changes the display on the unit. When you play a tape recorded in stereo or with a bilingual sound track, the HiFi indicator on the unit lights up.

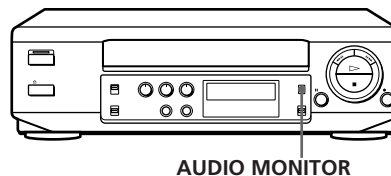


To listen to a		Press AUDIO MONITOR until the display window indicator shows
Stereo tape's	Bilingual tape's	
Stereo sound	Main and sub sounds	"L/R"
Left channel	Main sound	"L"
Right channel	Sub sound	"R"
Standard sound*	Standard sound*	No indication

* The mixed sound of left and right channels (monaural)

How sound is recorded on a video tape

The unit records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

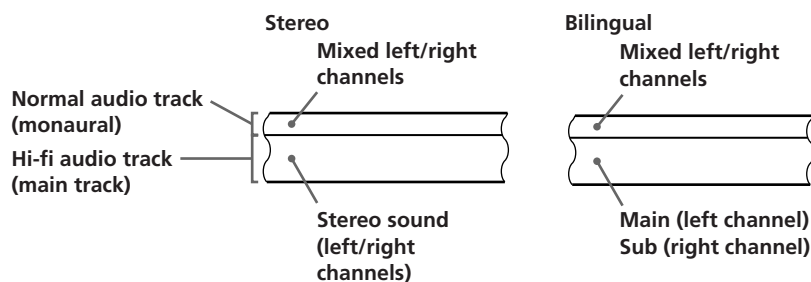


Notes

- When the pause mode lasts for more than approximately five minutes, the unit will automatically enter the playback mode.

(SLV-KF285PK only)

- To listen to playback sounds in stereo, you must use the LINE OUT connections.
- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO MONITOR setting.

Playing/searching at various speeds

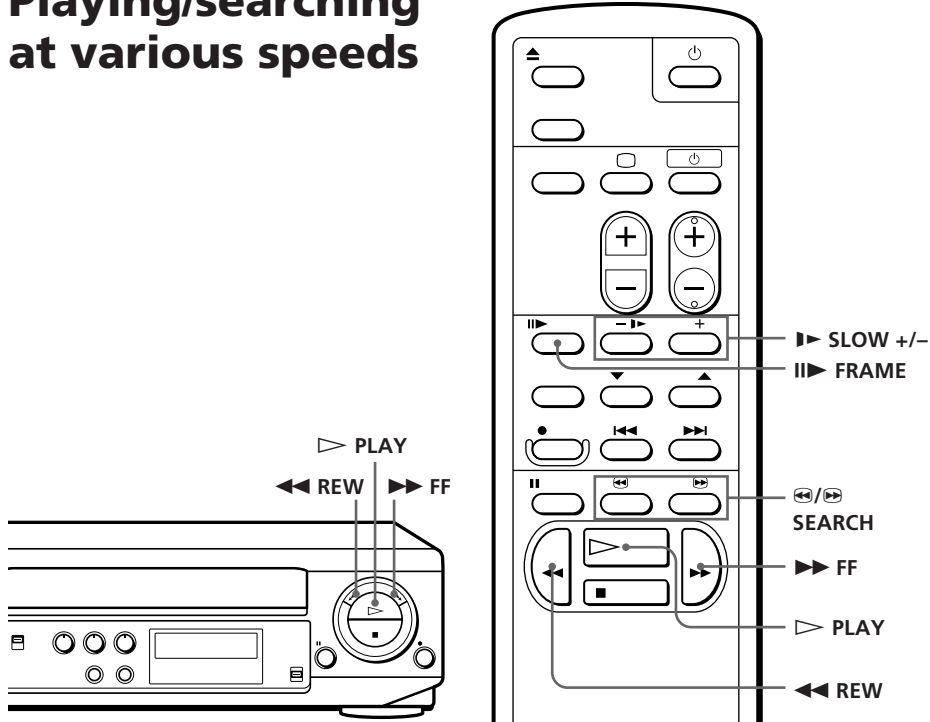

Playback options	Operation
Fast-forward/rewind	During stop, press ►► FF or ◀◀ REW.
View the picture during fast-forward or rewind	During fast-forward, hold ►► FF down. During rewind, hold ◀◀ REW down.
Play at high speed	During playback or pause, press 🔍 SEARCH or 🔍 SEARCH.
Play in slow motion	During playback or pause, press ► SLOW+/- . Press the +/- buttons to change the speed.
Play frame by frame	During pause, press ► FRAME to advance the picture one frame. Hold the button down to play one frame each second.
Rewind and start play	During stop, hold ◀◀ REW on the unit down and press ▷ PLAY on the unit.

To resume normal playback

Press ▷ PLAY.

Tip

- If the picture shakes while in the still mode, adjust the picture using ▼/▲ TRACKING NORMAL/SLOW STILLADJUST on the unit.

Notes

- Streaks or snow cannot be eliminated completely in the various playback operations.
- The sound is muted during these operations.

Karaoke sing-along

You can sing along with a karaoke videotape played back on this unit.

(SLV-KA185PK/KF285PK only)

You can also sing along with a TV broadcast or music played back on equipment connected to the LINE IN jacks on the rear panel of the unit. If you use an extra microphone (not supplied), you can sing duets.

Before you start...

- Turn on your TV and set it to the video channel.

(For SLV-KA175PK)


- Connect the supplied microphone to the MIC IN jack.

(For SLV-KA185PK/KF285PK)


- Connect the supplied microphone to the MIC IN 1 jack.

To sing duets, connect the optional microphone to the MIC IN 2 jack.

(e.g. SLV-KA175PK)

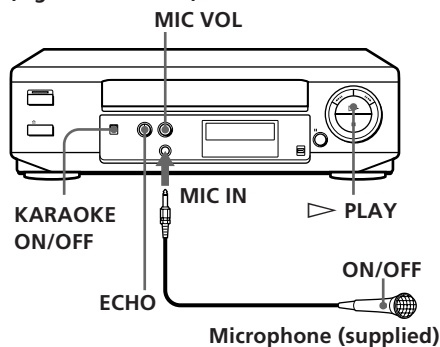

(e.g. SLV-KA185PK)

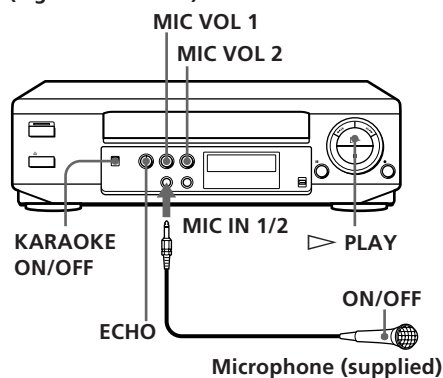

Singing along with karaoke video tapes

- 1** Set KARAOKE ON/OFF to ON.
- 2** Insert a karaoke video tape.
(SLV-KA175PK)
The unit turns on and starts playing automatically.
(SLV-KA185PK/KF285PK)
The unit turns on and starts playing automatically if you insert a tape with its safety tab removed.
- 3** Press ▷ PLAY (if playback didn't start in step 2).
If you want to playback a specific song, see "Searching with the AMS function" on the next page.
- 4** Set the ON/OFF switch on the microphone to ON.
Now you can enjoy playing karaoke.

To adjust the microphone volume

(For SLV-KA175PK)

Turn the MIC VOL control for the microphone connected to MIC IN.

Setting the MIC VOL control to the centre position provides the best microphone volume.

(For SLV-KA185PK/KF285PK)

Turn the MIC VOL 1 control for the microphone connected to MIC IN 1.

Turn the MIC VOL 2 control for the microphone connected to MIC IN 2.

Setting the MIC VOL 1 and/or 2 control(s) to the centre position provides the best microphone volume.


To control the echo effect

Turn the ECHO control. This controls both microphones' echo effect in the same way.

To get the best effect, adjust the microphone volume to a slightly higher level than the music volume.

Searching with the AMS function


The AMS (Automatic Music Sensor) function searches for the beginning of the next or previous song by detecting a blank space between songs.

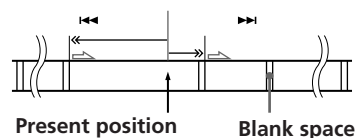

- 1 Press ■ STOP.
- 2 Press ◀◀/▶▶ AMS.
 - To locate the beginning of the next song, press ▶▶ AMS.
 - To locate the beginning of the previous song, press ◀◀ AMS.

The unit starts searching and stops automatically when it locates the beginning of the next or previous song.

- 3 Press ▷ PLAY to start playback.

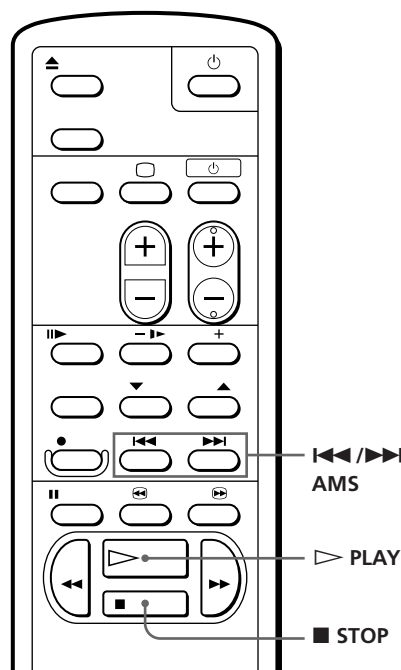

continued


Karaoke sing-along (continued)

Reducing the playback vocals (Karaoke Pon) (SLV-KF285PK only)

You can use ordinary music sources with vocals for karaoke with this function. Use hi-fi stereo music sources.

Set KARAOKE PON ON/OFF to KARAOKE PON.

The singer's voice will be reduced.

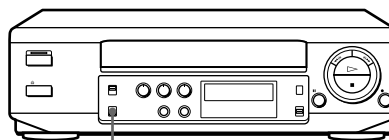

KARAOKE PON ON/OFF

To cancel Karaoke Pon

Set KARAOKE PON ON/OFF to OFF.

Tip (SLV-KA185PK/KF285PK only)

- When you sing along with music played back on equipment connected to the LINE IN jacks on the unit, play the music source and follow steps 1 and 4 on page 16.

Notes


- If the sound is reproduced through a stereo amplifier, turn down the volume of amplifier before operation.
- If feedback occurs, turn down the microphone or TV volume, or move the microphone away from the speakers.
- (SLV-KF285PK only)
Karaoke Pon does not work with the following tapes:
 - tapes on which different vocal sounds are recorded on the left and right channels, such as a duet;
 - tapes recorded monaurally; or
 - tapes on which sound sources are recorded with strong echo effects and chorus effects.
- The AMS may not work correctly when:
 - the tape quality is poor,
 - a song is very short (less than 40 seconds),
 - the interval between songs is very short (less than 6 seconds),
 - a high level sound is recorded between songs or at the beginning of a song,
 - there are low level passages or passages without sound in a song,
 - narration is recorded at the beginning of a song,
 - fade-in or fade-out recording is made on the tape, or
 - AMS starts from the very beginning of the tape or near an interval between songs.

Adjusting the picture

Adjusting the tracking

Although the unit automatically adjusts the tracking when playing a tape, distortion may occur if the tape was recorded in poor condition. If so, manually adjust the tracking.

Press ▼/▲ TRACKING NORMAL/SLOW to obtain the best possible picture. The distortion should disappear as you press one of the two buttons. If you cannot get a clear picture with manual adjustment, press TRACKING AUTO/MANUAL to return to automatic adjustment.

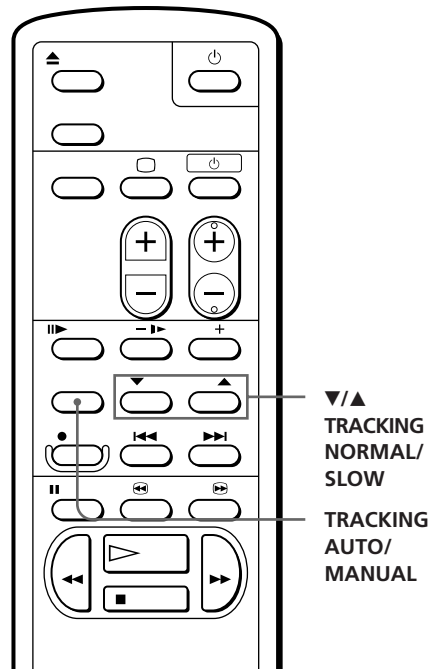

About OPC

OPC (Optimum Picture Control) automatically improves playback quality by adjusting the unit to the condition of the video heads and tape.


The OPC function automatically works on all types of tapes, including rental tapes. You can play a tape using the OPC function even if the tape was not recorded with it.

Notes


- The auto tracking function works automatically when you play back a tape just after inserting it.
- (SLV-KA175PK only)
Sufficient picture quality may not be obtained when playing back tapes recorded in poor condition.
- (SLV-KA185PK/KF285PK only)
Sufficient picture quality may not be obtained when playing back tapes recorded on another VCR or tapes in poor condition.
- When a tape recorded with the copyguard system is played back, intermittent distortion may appear in the upper portion of the picture. However, this is not a malfunction of the unit.

Editing with another VCR

How to connect to record on this unit (SLV-KA185PK and KF285PK only)

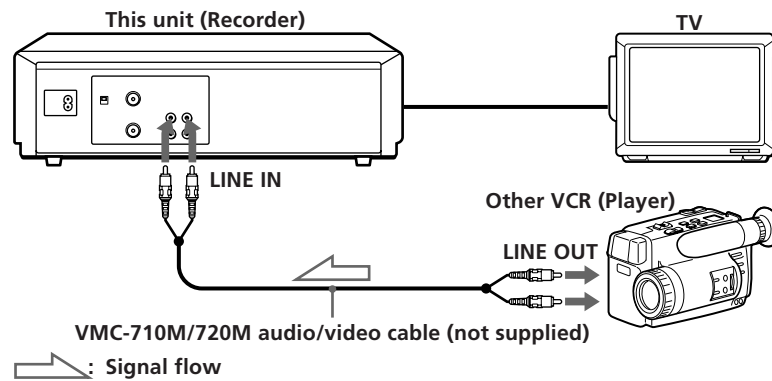

How to connect to record to another VCR

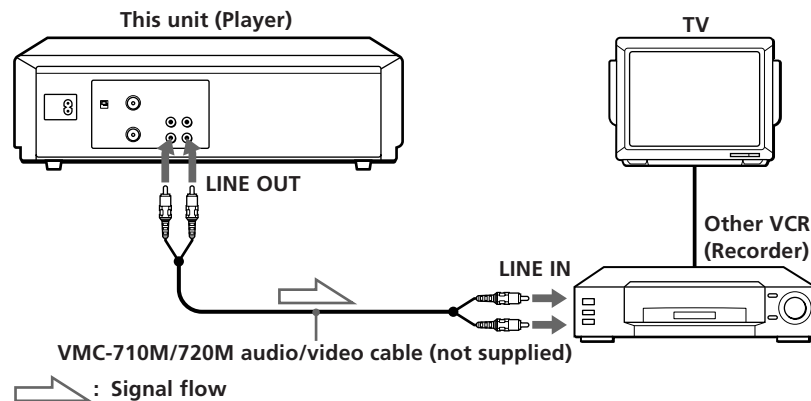

Tip

(For SLV-KA175PK/KA185PK)

- If the other VCR is a stereo type, use a connecting cable like the Sony VMC-910MS.

(For SLV-KF285PK)

- Use a connecting cable like the Sony VMC-810. If the other VCR is a monaural type, use a connecting cable like the Sony VMC-910MS.


Notes

- Make sure you connect the plugs to jacks of the same color.
- (SLV-KA185PK/KF285PK only)

When connecting the units, do not simultaneously connect the LINE IN and LINE OUT jacks on your unit with the other VCR. A humming noise may occur if you do this.

Operation (when recording on this unit) (SLV-KA185PK/KF285PK only)

You can make a copy of a tape using this unit for recording or playback. The unit cannot record TV programs directly since it does not have a TV tuner.

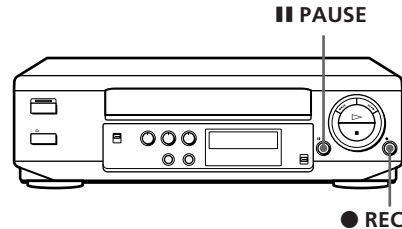

Before you start editing

- Turn on your TV and set it to the video channel.


- 1 Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2 Insert a tape with its safety tab in place into this (recording) unit. Search for the point to start recording and press || PAUSE.
- 3 Press ● REC on this unit to set it to recording pause.
- 4 To start editing, press the || PAUSE buttons on both units at the same time.

To stop editing

Press the ■ STOP buttons on both units.

To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on a tape again, cover the tab hole with adhesive tape.

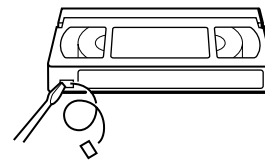

Auto head cleaner

The unit incorporates an auto head cleaner which cleans the video heads when a tape is loaded or unloaded. When the heads are not sufficiently clean, even after a tape has been loaded/unloaded several times, use the Sony V-25CL video head cleaning cassette.

Tips

- To edit more precisely, press the || PAUSE buttons on the units to release pause.
- To cut out unwanted scenes while editing, press || PAUSE on this unit when an unwanted scene begins. When that scene ends, press || PAUSE again to resume recording.

Note

- You can record tapes only in SP mode.


General setup information

Attaching an external antenna connector

300-ohm to 75-ohm matching transformer

When using a 300-ohm twin lead cable for VHF/UHF antenna, use an EAC-32 antenna connector (not supplied) to connect the antenna to the unit.


- 1 Loosen the screws on the antenna connector.
- 2 Wind the twin leads around the screws on the antenna connector.
- 3 Retighten the screw.

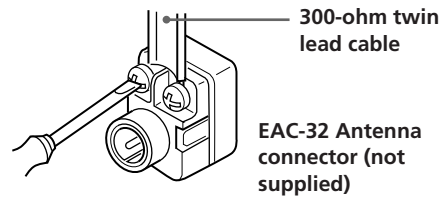

75-ohm to 300-ohm matching transformer

When using a TV with 300-ohm VHF terminal, use this type antenna connector (not supplied) to connect the 75-ohm coaxial cable to the TV.


- 1 Connect the 75-ohm coaxial cable to the antenna connector.
- 2 Attach the 300-ohm Y type terminal to the TV.

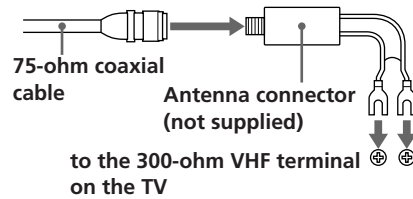

Attaching a UHF/VHF band mixer



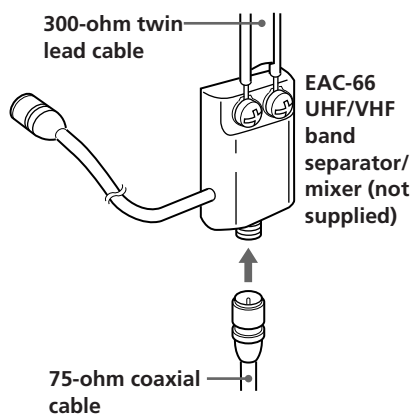


When using both 75-ohm coaxial cable and 300-ohm twin lead cable for VHF/UHF antenna, use the EAC-66 UHF/VHF band separator/mixer (not supplied) to connect the antenna to the unit.

- 1 Loosen the screws on the mixer.
- 2 Wind the twin leads around the screws on the mixer.
- 3 Retighten the screws.
- 4 Connect the 75-ohm coaxial cable to the mixer.




Troubleshooting

If you have any questions or problems not covered below, please consult your nearest Sony dealer.

	Symptom	Remedy
Power	The POWER switch does not function.	<ul style="list-style-type: none"> Connect the AC power cord securely.
	The power is turned on but the unit does not operate.	<ul style="list-style-type: none"> Moisture condensation occurs. Turn the power off, unplug the AC power cord and leave the unit to dry for over an hour.
	The VCR enters standby mode or turns off automatically.	<ul style="list-style-type: none"> The auto safety system is triggered to protect your tape and the unit's mechanism when there is something wrong with the tape or when the mechanism is overloaded. Press  to restart the unit. If the unit does not work after pressing  again, disconnect the AC power cord from the wall outlet. Wait for at least 15 seconds. Then reconnect AC power, and press  again. If the unit still does not work, please consult your nearest Sony dealer.
Playback	The playback picture does not appear on the TV screen.	<ul style="list-style-type: none"> Make sure the TV is set to the video channel. If you are using a monitor, set it to video input.
	The picture is not clear.	<ul style="list-style-type: none"> Adjust the tracking with the / TRACKING NORMAL/SLOW buttons. The video heads are dirty (see below). Clean the video heads using the Sony V-25CL video head cleaning cassette. If this cleaning cassette is not available in your area, have the heads cleaned at your nearest Sony dealer (a standard service charge will be required). Do not use a commercially available wet-type cleaning cassette, as it may damage the video heads. The video heads may have to be replaced. Consult your local Sony dealer for more information.
	The picture rolls vertically during picture search.	<ul style="list-style-type: none"> Adjust the vertical hold control on the TV or monitor.
	The picture has no sound.	<ul style="list-style-type: none"> The tape is defective. Use a new tape.

Symptoms caused by contaminated video heads

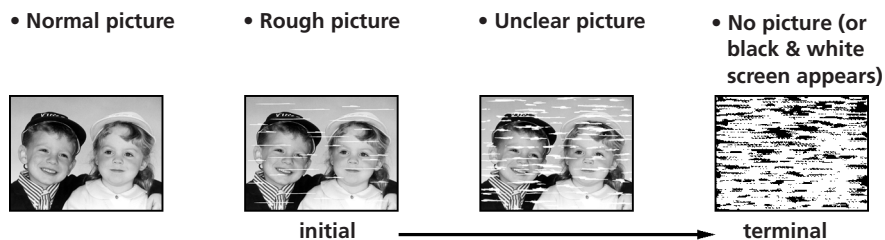

continued

Additional Information | 23

Troubleshooting (continued)

	Symptom	Remedy
Recording*	The tape starts playing as soon as it is inserted.	<ul style="list-style-type: none">• The safety tab has been removed. To record on this tape, cover the tab hole.
	The tape is ejected when you press ● REC.	<ul style="list-style-type: none">• Check that the safety tab has not been removed.
	The microphone sound is distorted.	<ul style="list-style-type: none">• The MIC VOL control is set too high.
Others	A tape cannot be inserted.	<ul style="list-style-type: none">• Check that a tape isn't already in the tape compartment.
	The remote commander does not function.	<ul style="list-style-type: none">• Make sure you are pointing the remote commander at the remote sensor on the unit.• Replace all the batteries in the remote commander with new ones if they are weak.
	The unit needs to be cleaned.	<ul style="list-style-type: none">• Clean the cabinet, panel, and controls with a dry soft cloth, or a soft cloth slightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzine.

* SLV-KA185PK/KF285PK only

Specifications

System

Format
VHS NTSC standard

Video recording system (SLV-KA185PK/KF285PK only)
Rotary head helical scanning FM system

Video heads
Double azimuth four heads

Video signal
NTSC color, EIA standards

Tape speed
SP: 33.35 mm/s, playback only

Maximum recording (SLV-KA185PK/KF285PK only)/playback time
2 hrs. in SP mode (with T-120 tape)

Fast-forward and rewind time
Approx. 4 min. 30 sec. (with T-120 tape)

Tuner section

RF output channel
VHF channel 3 or 4

Antenna
75-ohm antenna terminal for VHF/UHF

Inputs and outputs

LINE IN (SLV-KA185PK/KF285PK only)
VIDEO IN, phono jack (1)
Input signal: 1 Vp-p, 75 ohms, unbalanced, sync negative

AUDIO IN,
phono jack (1) (SLV-KA185PK)
phono jack (2) (SLV-KF285PK)
Input level: 327 mVrms
Input impedance: more than 47 kilohms

LINE OUT
VIDEO OUT, phono jack (1)
Output signal: 1 Vp-p, 75 ohms, unbalanced, sync negative

AUDIO OUT,
phono jack (1) (SLV-KA175PK/KA185PK)
phono jack (2) (SLV-KF285PK)
Rated output level: 327 mVrms
Load impedance: 47 kilohms
Output impedance: less than 10 kilohms

Microphone input
MIC IN (minijack) (1) (SLV-KA175PK)
MIC IN 1/2 (minijack) (2) (SLV-KA185PK/KF285PK)
more than 3 kilohms, 1.84 mVrms

General

Power requirements
110 – 240 V AC, 50/60 Hz

Power consumption
12 W

Operating temperature
5°C to 40°C

Storage temperature
–20°C to 60°C

Dimensions
Approx. 355 × 102 × 283.5 mm (w/h/d) including projecting parts and controls

Mass
Approx. 3.8 kg

Supplied accessories

Remote commander
RMT-V173 (1) (SLV-KA175PK)
RMT-V173A (1) (SLV-KA185PK/KF285PK)

Size AA (R6) batteries (2)

75-ohm coaxial cable with F-type connectors (1)

AC power cord (1)

Microphone (1)


Audio/video cable (3 phono to 3 phono) (1) (SLV-KF285PK only)

Design and specifications are subject to change without notice.


Index to parts and controls

Refer to the pages indicated in parentheses () for details.


Front panel (SLV-KF285PK)

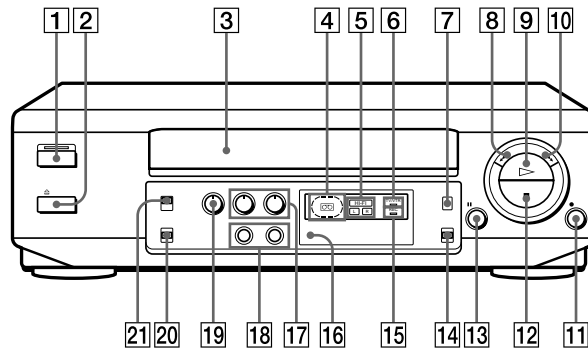

Front panel (SLV-KA185PK)

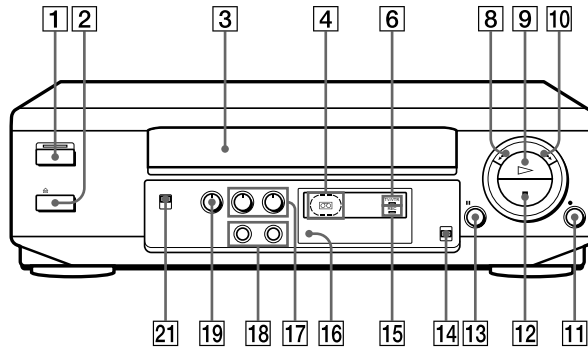


Front panel (SLV-KA175PK)

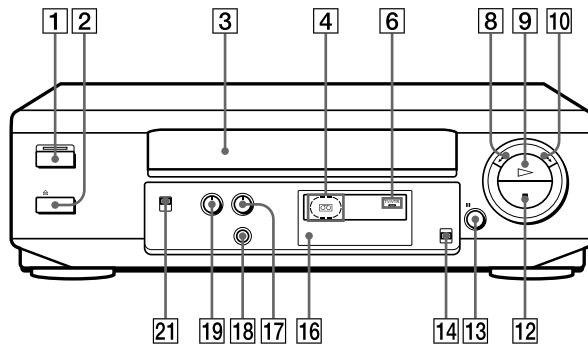


Index to parts and controls (continued)


Rear panel (SLV-KF285PK)

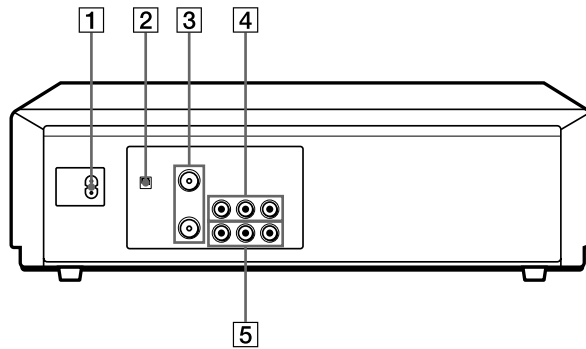

Rear panel (SLV-KA185PK)

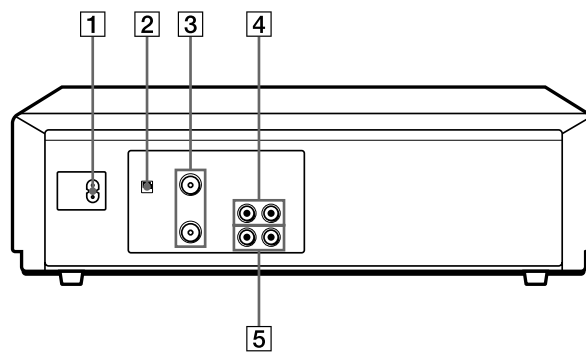

Rear panel (SLV-KA175PK)

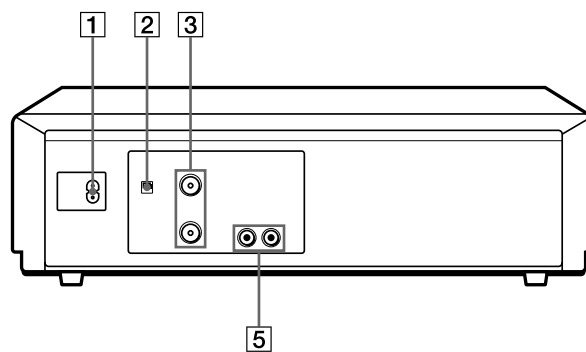


-
- | | | | |
|---|--|---|--|
| 1 | AC IN connector | 5 | (SLV-KF285PK)
LINE OUT AUDIO L/R/VIDEO
jacks (8, 20) |
| 2 | RF UNIT switch (10) | | |
| 3 | VHF/UHF IN/OUT connectors (9) | | (SLV-KA175PK/KA185PK)
LINE OUT AUDIO/VIDEO jacks (7,
20) |
| 4 | LINE IN AUDIO L/R/VIDEO jacks
(20) (SLV-KF285PK only) | | |
| | LINE IN AUDIO/VIDEO jacks (20)
(SLV-KA185PK only) | | |

continued

Index to parts and controls (continued)

Remote commander (e.g. SLV-KA185PK/KF285PK)

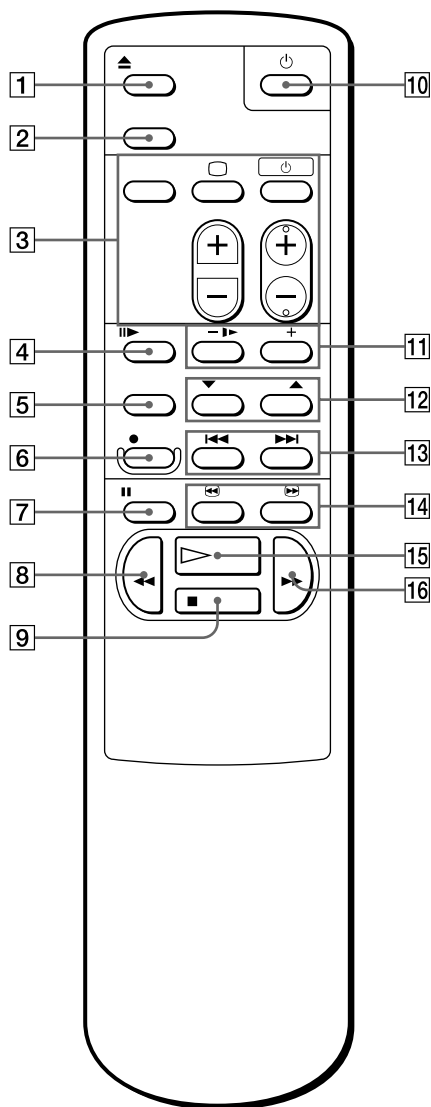

- 1 ▲ EJECT button (12)
- 2 TV/VTR button
- 3 TV buttons (Only for TV) (5)
TV/VIDEO
□ (TV power)
⏻ (Power standby)
VOL +/-
PROG (CH) +/-
- 4 ⏮▶ FRAME button (14)
- 5 TRACKING AUTO/MANUAL button (19)
- 6 ● REC button (21) (SLV-KA185PK/KF285PK only)
- 7 ⏸ PAUSE button (12)
- 8 ◀◀ REW button (12, 14)
- 9 ■ STOP button (12)
- 10 POWER switch
- 11 ▶▶ SLOW +/- buttons (14)
- 12 ▼/▲ TRACKING NORMAL/SLOW STILL ADJUST buttons (19)
- 13 ◀◀/▶▶ AMS buttons (17)
- 14 🔍/🔍 SEARCH buttons (12, 14)
- 15 ▷ PLAY button (12)
- 16 ▶▶ FF button (12, 14)

Index

A, B

- Accessories supplied 4
- Adjusting
 - picture 19
 - tracking 19
- AMS searching 17
- Antenna hookup 9
- Audio track 13
- Auto head cleaner 21
- AV connection 7

C

- Cleaning the video heads 21, 23
- Connecting
 - the unit and your TV 6
 - external antenna connector 22
 - VHF/UHF band mixer 22

D

- Dubbing. *See* Editing

E, F, G

- Echo 17
- Editing 20

H, I, J

- Hi-fi audio track 13

K, L

- Karaoke sing-along 16

M

- Monitoring
 - during playback 13

N

- Normal audio track 13

O

- OPC (Optimum Picture Control) 19

P, Q

- Picture adjustment. *See* Adjusting
- Adjusting
- PICTURE switch 12
- Playback 11
 - at various speeds 12, 14
 - frame-by-frame 14
 - slow motion 14

R

- Recording 21
- Reducing the playback vocals 18
- Remote commander 5
- Rental tape 12
- RF UNIT switch 10

S

- Safety tab 21
- Searching at various speeds 14
- SP mode 21

T, U, V, W, X, Y, Z

- Tracking adjustment. *See* Adjusting