

# *Compact Disc Player*

---

Operating Instructions



*CDP-CX50  
CDP-CX571*




## WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

For the customers in the United States

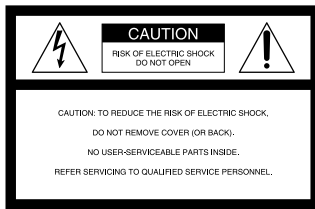

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### CAUTION

You are cautioned that any changes or modification not expressly approved in this manual could void your authority to operate this equipment.

### Owner's Record

The model and serial numbers are located at the rear of the unit.

Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_


### For the customers in Canada

#### CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.


### (Except for the customers in the United States and Canada)

The following caution label is located inside the unit.

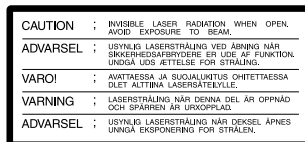

This appliance is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

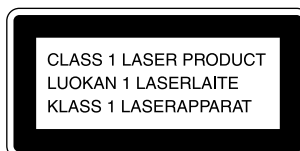

This equipment is intended for home entertainment purposes only. The warranty shall be invalidated if used in commercial environments, such as by disc jockeys, etc., even within the Warranty Period.

## Welcome!

Thank you for purchasing the Sony Compact Disc Player. Before operating the unit, please read this manual thoroughly and retain it for future reference.

## About This Manual

The instructions in this manual are for models CDP-CX50 and CDP-CX571.

### Conventions

- Instructions in this manual describe the controls on the player.
- The following icon is used in this manual:



Indicates hints and tips for making the task easier.

# TABLE OF CONTENTS

---

## Getting Started

Unpacking.....	4
Hooking Up the System.....	4
Inserting CDs.....	5

---

Playing a CD.....	8
-------------------	---

---

## Playing CDs

Locating a Specific Disc.....	10
Specifying the Next Disc to Play.....	10
Locating a Specific Track or a Point in a Track.....	10
Playing Repeatedly.....	11
Playing in Random Order (Shuffle Play).....	11
Creating Your Own Program (Program Play).....	12
Playing Your Favorite Disc Independently (Plus One Play).....	14

---

## Additional Information

Precautions.....	15
Notes on CDs.....	15
Troubleshooting.....	16
Specifications.....	16

---

Index.....	17
------------	----

## Unpacking

Check that you received the following items:

- Audio cord (1)
- CD booklet holder (1)


### 💡 How to use the CD booklet holder

The CD booklet holder helps you locate the disc easily. After you have inserted discs into the player, you can put the CD booklet (which comes with a CD) into the supplied holder.

## Hooking Up the System


### Overview

This section describes how to hook up the CD player to an amplifier. Be sure to turn off the power of each component before making the connections.

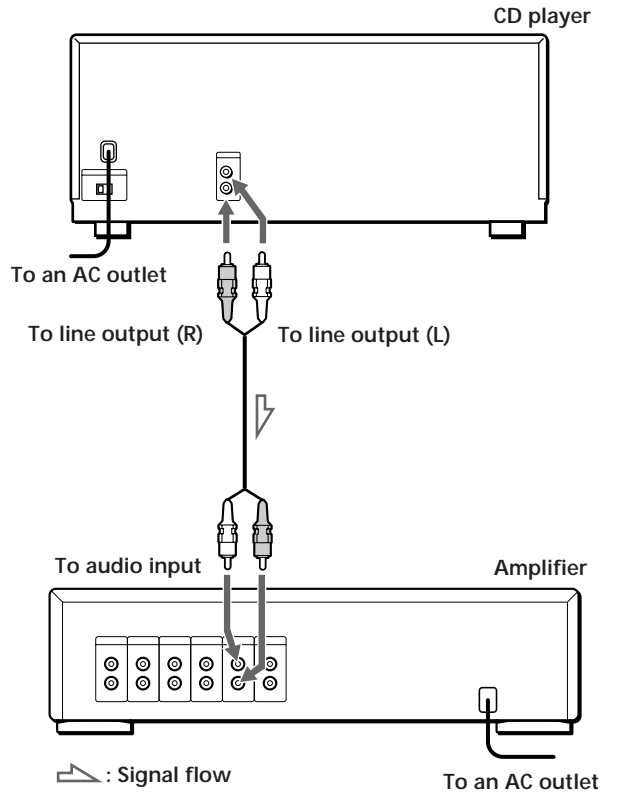


### What cords will I need?

 Audio cord (1) (supplied)




## Hookups

When connecting the audio cord, be sure to match the color-coded cord to the appropriate jacks on the components: Red (right) to Red and White (left) to White. Be sure to make connections firmly to avoid hum and noise.

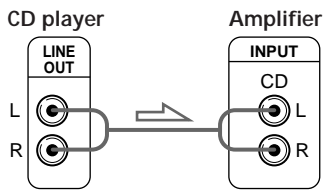

## Setting the voltage selector (voltage selector equipped models only)

Check that the voltage selector on the rear panel of the player is set to the local power line voltage. If not, set the selector to the correct position using a screwdriver before connecting the AC power cord to a wall outlet.

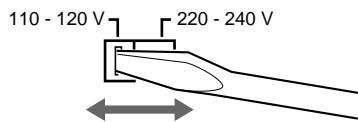


## Connecting the AC power cord

Connect the AC power cord to a wall outlet.



## Note on placement

Be sure to place the player on a horizontal place. If the player is slanted, it may cause malfunction or damage the player.

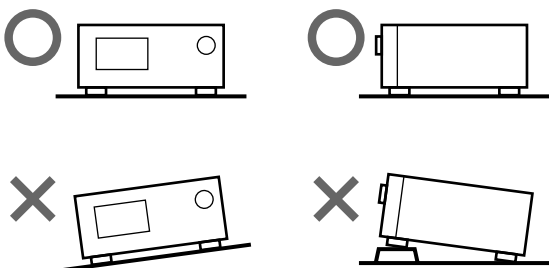


## Inserting CDs

You can insert up to 51 discs into this player.

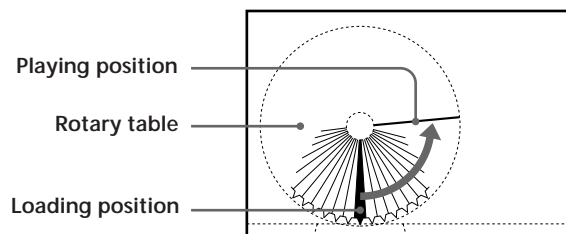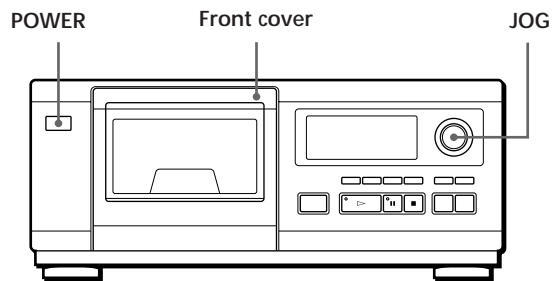


- 1 Press POWER to turn on the player.
- 2 Open the front cover by pushing the right edge of the cover.

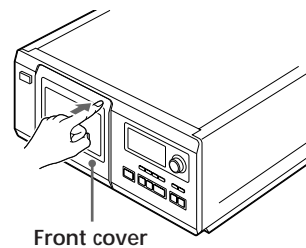

(Continued)


## Getting Started

- 3** Turn the JOG dial until you find the disc slot where you want to insert a disc, while checking the disc number (written beside every slot and also indicated in the display).

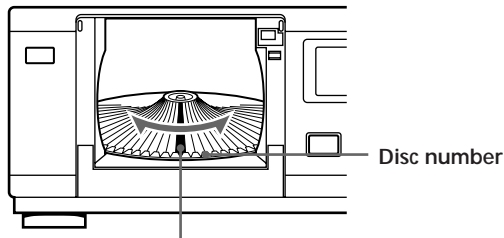

Disc slot at the loading position

 The disc number at the loading position appears in the display.\* As you turn the JOG dial, the disc number changes.



Disc number


You can play the disc you want independently by using the Plus One function. When using this function, insert the disc into the PLUS ONE slot. For details, see “Playing Your Favorite Disc Independently” on page 14.

\* If you have already inserted discs, the disc number at the playing position appears. When you turn the JOG dial, the displayed disc number changes to the one at the loading position.

- 4** Insert a disc with the label side facing right.


### Notes

- Make sure you have inserted the disc into each slot at a right angle to the rotary table. If the disc is not put in straight, it may damage the player or the disc.
- Make sure the rotary table comes to a complete stop before inserting or removing discs.

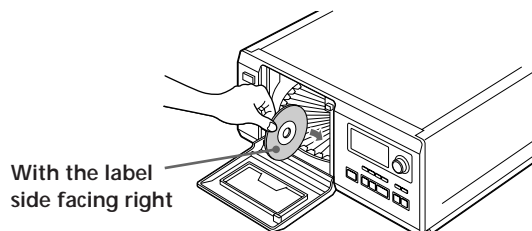


- 5** Repeat Steps 3 and 4 to insert more discs.

- 6** Close the front cover by pushing the right edge of the cover until it clicks.

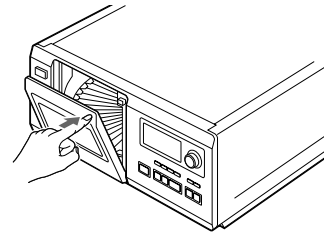

The rotary table turns and the disc slot at the loading position is set to the playing position. Always close the front cover except when you insert or remove discs.

 The supplied CD booklet holder helps you locate a disc.  
You can store up to 100 CD booklets.

### Notes

- Do not insert an empty 8 cm (3-inch) CD adaptor (CSA-8). It may damage the player.
- Do not attach anything such as seals or sleeves to CDs. It may damage the player or the disc.
- If you drop a disc into the player and the CD won't go into the slot correctly, consult your nearest Sony dealer.
- When transporting the player, remove all discs from the player.

## Removing CDs

After following Steps 1 to 3 of “Inserting CDs” on pages 5 – 6, remove the discs. Then close the front cover.


### Note

The disc being played does not come to the loading position if you open the front cover during playback. (The disc number flashes in the display.)

If you want to remove the disc being played, push the JOG dial after opening the front cover. The disc comes to the loading position. Remove the disc after the rotary table comes to a complete stop.



# Playing a CD

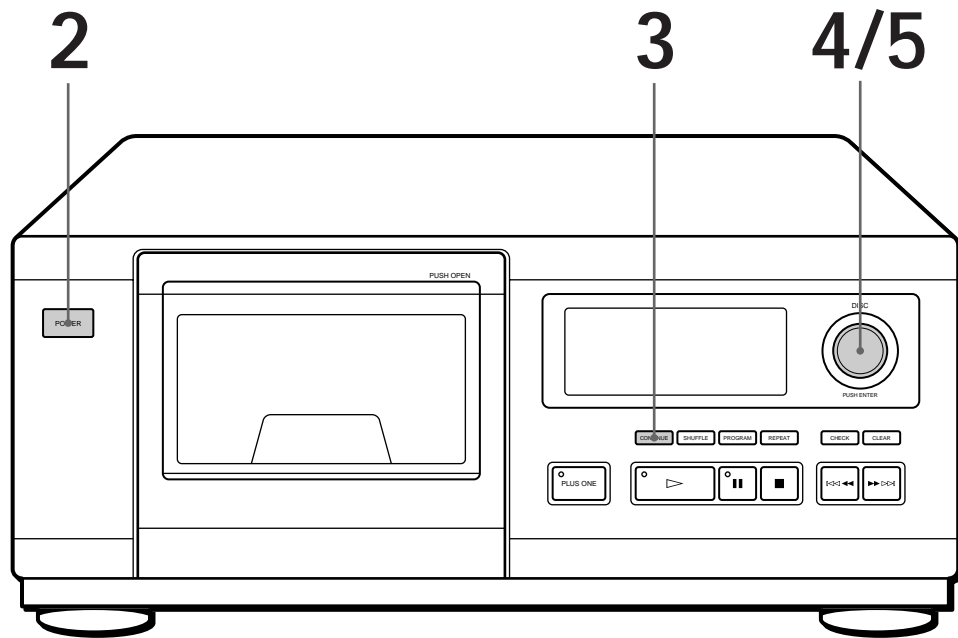


- See pages 4 – 5 for the hookup information.
- Make sure you have inserted the discs correctly as indicated on page 5.
- You can play all the tracks on a disc in the original order (Continuous Play). You can also play up to 51 discs consecutively.

- 1 Turn on the amplifier and select the CD player position.
- 2 Press POWER to turn on the player.
- 3 Press CONTINUE to select ALL DISCS or 1 DISC Continuous Play mode.  
Each time you press CONTINUE, “ALL DISCS” or “1 DISC” appears in the display.

When you select	The player plays
ALL DISCS	All discs in the player consecutively in the order of disc number. Empty disc slots are skipped.
1 DISC	Only one disc you have selected

 
- 4 Turn the JOG dial until the disc number you want appears in the display to select the first disc (ALL DISCS) or the disc you want (1 DISC).



- 5** Push the JOG dial to start playing.  
 The selected disc is set to the playing position, and the player plays all the discs from the selected one (ALL DISCS) or all the tracks once (1 DISC).  
 Adjust the volume on the amplifier.


**Display information while playing a disc**

While playing a disc, the display shows the current disc number, track number, playing time of the track and the next disc number.

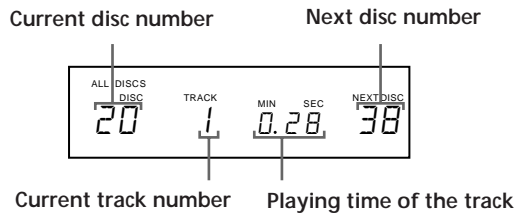


**To stop playback**

Press ■.

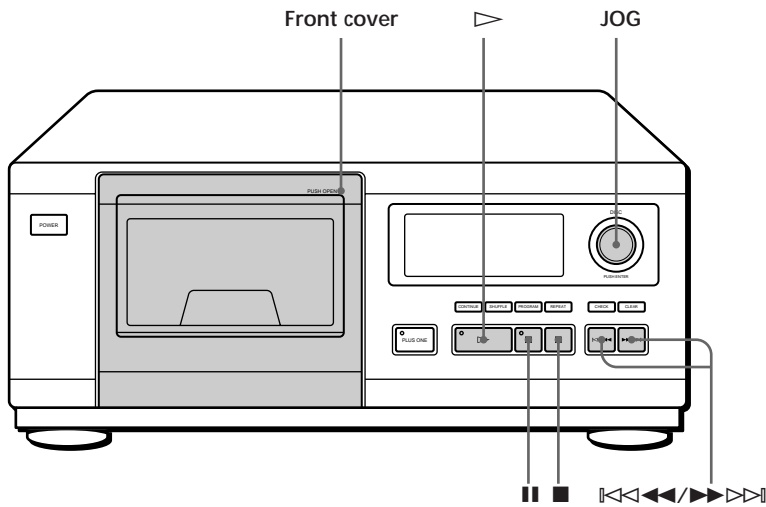

To	You need to
Pause	Press ■
Resume playing after pause	Press ■ or ▷
Go to the next track	Press ▷▷▷▷
Go back to the preceding track	Press ◁◁◁◁
Stop playing and remove the disc	Open the front cover, then push the JOG dial. The disc comes to the loading position.

## Locating a Specific Disc

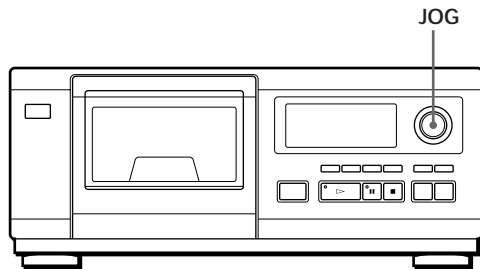


Turn the JOG dial until the disc number you want appears in the display. Push the JOG dial to start play.

## Specifying the Next Disc to Play

You can specify the next disc to play while playing a disc in Continuous or 1 DISC Shuffle Play mode.

While playing a disc, turn the JOG dial until the disc number you want appears in the display.

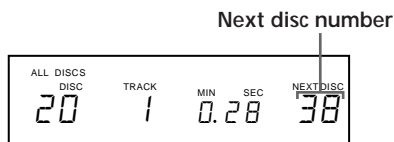


After the current disc is played, the next disc you have specified starts playing.

If you want to skip to the next disc right away, push the JOG dial while playing the current disc.

To cancel the disc you have specified  
Press CONTINUE twice.

## Locating a Specific Track or a Point in a Track

You can quickly locate any track while playing a disc using the  $\lll/rrr$  (AMS: Automatic Music Sensor) buttons. You can also locate a specific point in a track while playing a disc.

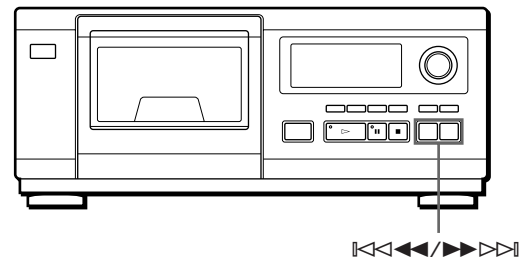


To locate	Press
the next or succeeding tracks	$\ggg$ repeatedly until you find the track
the current or preceding tracks	$\lll$ repeatedly until you find the track
a point in a track while monitoring the sound	$\ggg$ (forward) or $\lll$ (backward) and hold down until you find the point
a point in a track quickly by observing the display	$\ggg$ (forward) or $\lll$ (backward) and hold down until you find the point during pause. You will not hear the sound during the operation.

### Note

If "77" appears in the display, the disc has reached the end while you were pressing  $\ggg$ . Press  $\lll$  to go back.

## Playing Repeatedly

You can play discs/tracks repeatedly in any play mode.

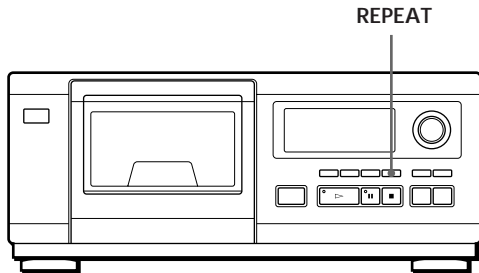

Press REPEAT while playing a disc. "REPEAT" appears in the display. The player repeats the discs/tracks as follows:

When the disc is played in	The player repeats
ALL DISCS Continuous Play (page 8)	All tracks on all discs
1 DISC Continuous Play (page 8)	All tracks on the current disc
ALL DISCS Shuffle Play (page 11)	The player does not repeat discs/tracks but keeps shuffling until you stop play whether or not you press REPEAT.
1 DISC Shuffle Play (page 11)	All tracks on the current disc in random order
Program Play (page 12)	The same program

### To cancel Repeat Play

Press REPEAT repeatedly until "REPEAT" disappears from the display.


## Repeating the current track

You can repeat only the current track.

While the track you want is being played, press REPEAT repeatedly until "REPEAT 1" appears in the display.

## Playing in Random Order (Shuffle Play)

You can have the player "shuffle" the tracks and play in random order. The player shuffles all the tracks on all discs or on the disc you specified.

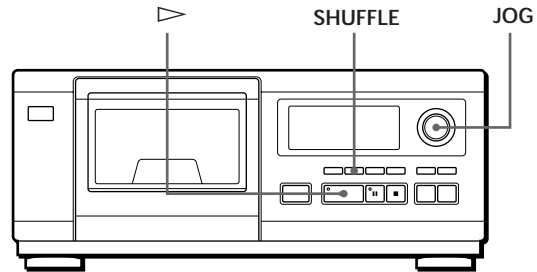

- 1 Press SHUFFLE to select ALL DISCS or 1 DISC Shuffle Play mode. Each time you press SHUFFLE, "ALL DISCS" or "1 DISC" appears in the display.


When you select	The player plays
ALL DISCS	All tracks on all discs in random order. The player keeps shuffling tracks until you stop play.*
1 DISC	All tracks on the specific disc in random order

\* The player may play the same track more than once.

- 2 When you want to specify the disc for 1 DISC Shuffle Play, turn the JOG dial until the disc number you want appears in the display.
- 3 Push the JOG dial or press ▷. ALL DISCS or 1 DISC Shuffle Play starts. "⌈ ⌋" appears in the display while the player is "shuffling" the discs or the tracks.

To cancel Shuffle Play  
Press CONTINUE.


 You can start Shuffle Play while playing  
Press SHUFFLE, and Shuffle Play starts from the current track.

 You can specify the next disc to play during 1 DISC Shuffle Play  
Turn the JOG dial to specify the next disc. After all the tracks on the current disc are played in random order, the next disc starts playing. If you want to skip to the next disc right away, push the JOG dial while playing the current disc.

**Note**  
You cannot specify the next disc to play during ALL DISCS Shuffle Play.

## Creating Your Own Program (Program Play)


You can arrange the order of the tracks and/or discs to create your own program and the program is stored automatically. A program can contain up to 32 “steps” — one “step” may contain a track or a whole disc.

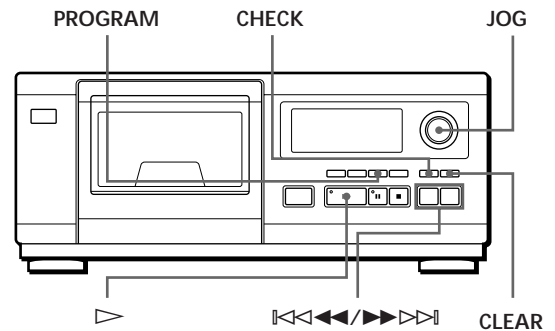


- 1** Press PROGRAM.  
If a program is already stored, the last step of the program appears in the display. When you want to erase the whole program, hold down CLEAR until “All Clr” appears in the display (see page 13).
- 2** Turn the JOG dial until the disc number you want appears in the display.




Disc number

 - 3** To program a whole disc, skip this step. Press  until the track number you want appears in the display.



Track number

4 Push the JOG dial or press PROGRAM.

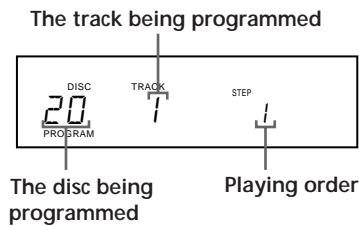

5 To program other discs/tracks, do the following:

To program	Repeat Steps
Other discs	2 and 4
Other tracks on the same disc	3 and 4
Other tracks on other discs	2 to 4

6 Press  $\triangleright$  to start Program Play.

To cancel Program Play  
Press CONTINUE.

The program remains even after Program Play ends  
When you press  $\triangleright$ , you can play the same program again.

When you press PROGRAM during Continuous or Shuffle Play  
The program will be played after the current track.

The program remains until you erase them  
If you replace discs, the programmed disc and track numbers remain. So, the player plays only the existing disc and track numbers.

### Checking the programmed order

You can check your program before or after you start playing.

Press CHECK.

Each time you press this button, the display shows the disc and track number of each step in the programmed order. (When a whole disc is programmed as one step, "AL" appears instead of the track number.) After the last step in the program, the display shows "End" and returns to the original display.

### Changing the programmed order

You can change your program before you start playing.


To	You need to
Erase a track or disc	Press CHECK until the track or disc you do not want appears in the display, then press CLEAR
Erase the last track or disc in the program	Press CLEAR. Each time you press the button, the last track or disc will be cleared.
Add tracks or discs to the end of the program	Follow the programming procedure
Change the whole program completely	Hold down CLEAR until "All Clr" appears in the display to erase the whole program, then create a new program following the programming procedure

### Erasing the program stored in memory


- 1 Press PROGRAM in the stop mode.
- 2 Hold down CLEAR until "All Clr" appears in the display.

## Playing Your Favorite Disc Independently (Plus One Play)


When you insert a disc into the PLUS ONE slot, you can play the disc independently from other discs. When using this function, the player is automatically set to 1 DISC Continuous Play mode.

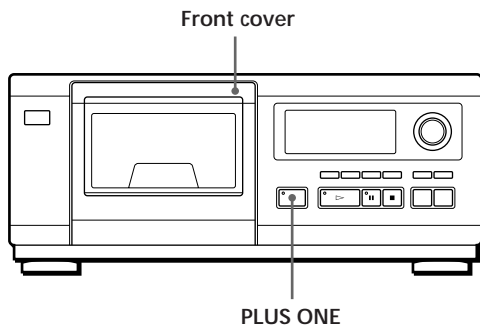

 - 1 Open the front cover.
- 2 Press PLUS ONE.  
The indicator on the PLUS ONE button lights up.



The PLUS ONE slot comes to the loading position.

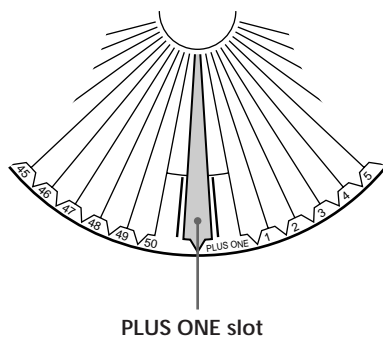

- 3 Insert a disc into the PLUS ONE slot.
- 4 Close the front cover.  
“P1” appears in the display instead of the disc number, and the player starts playing the disc in the PLUS ONE slot.



### To cancel Plus One Play

Press PLUS ONE. The indicator on the PLUS ONE button goes off. The disc number in the display changes to 51 and you can play the disc as the 51st disc.

- 💡 If you have already inserted a disc into the PLUS ONE slot  
Press PLUS ONE while the front cover is closed. Plus One Play starts immediately.
- 💡 You can select Shuffle Play mode during Plus One Play  
Press SHUFFLE before Step 4 above.

### Notes

- Plus One Play will be canceled if you turn the JOG dial or press buttons to specify the other disc.
- Plus One Play will be canceled if you press the PROGRAM button.
- The PLUS ONE slot comes to the loading position automatically if you open the front cover during Plus One Play. Do not put your hand inside the compartment nor change the disc before the rotary table comes to a complete stop. If you do, you may injure your hand or damage the disc.

### Precautions

#### On safety

- Caution — The use of optical instruments with this product will increase eye hazard.
- Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.

#### On power sources

- Before operating the player, check that the operating voltage of the player is identical with your local power supply. The operating voltage is indicated on the nameplate at the rear of the player.
- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- If you are not going to use the player for a long time, be sure to disconnect the player from the wall outlet. To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.
- AC power cord must be changed only at the qualified service shop.

#### On placement

- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not place the player on a soft surface such as a rug that might block the ventilation holes on the bottom.
- Do not place the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.

#### On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, leave the player turned on for about an hour until the moisture evaporates.

#### On adjusting volume

- Do not turn up the volume while listening to a portion with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level portion is played.

#### On cleaning

- Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

#### On transportation


- When transporting the player, open the front cover then remove all the discs from the player and turn the power off.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

### Notes on CDs

#### On handling CDs

- To keep the disc clean, handle the disc carefully.
- Do not stick paper or tape on the disc.

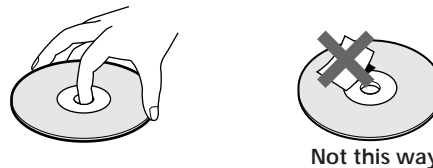


Not this way

- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight as there can be considerable rise in temperature inside the car.
- After removing a disc from the disc slot, store the disc in its case.

#### On cleaning

- Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out.

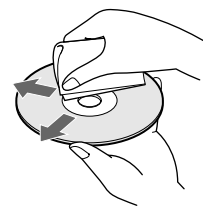

- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.



## Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help you remedy the problem. Should any problem persist, consult your nearest Sony dealer.

There is no sound.

- ➔ Check that the player is connected securely.
- ➔ Make sure you operate the amplifier correctly.

The CD does not play.

- ➔ There is no CD in a slot (“-no DISC-” appears). Insert a CD.
- ➔ Insert the CD with the label side facing right.
- ➔ Clean the CD (see page 15).
- ➔ Moisture has condensed inside the player. Open the front cover and leave the player turned on for about an hour (see page 15).

The player functions incorrectly.

- ➔ The microcomputer chips may be operating incorrectly. Disconnect the AC power cord, then connect it back to the wall outlet to reset the player.

## Specifications

### Compact disc player

Laser	Semiconductor laser ( $\lambda = 780 \text{ nm}$ ) Emission duration: continuous
Laser output	Max 44.6 $\mu\text{W}$ * * This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up block with 7 mm aperture.
Frequency response	2 Hz to 20 kHz $\pm 1 \text{ dB}$
Signal-to-noise ratio	More than 100 dB
Dynamic range	More than 88 dB
Harmonic distortion	Less than 0.013 %
Channel separation	More than 95 dB

### Output

	Jack type	Maximum output level	Load impedance
LINE OUT	Phono jacks	2 V (at 50 kilohms)	Over 10 kilohms

### General

#### Power requirements

Where purchased	Power requirements
USA/Canada	120 V AC, 60 Hz
Australia (CDP-CX50 only)	240 V AC, 50 Hz
UK	220 V – 230 V AC, 50/60 Hz
Australia/Singapore (CDP-CX571 only)	110 V – 120 V or 220 V – 240 V AC, adjustable, 50/60 Hz
Other countries	110 V – 120 V or 220 V – 240 V AC, adjustable, 50/60 Hz

Power consumption	12 W
Dimensions (approx.) (w/h/d)	When the front cover is closed 430 × 182.5 × 295 mm (17 × 7 1/4 × 11 5/8 in.) incl. projecting parts When the front cover is open 430 × 182.5 × 414 mm (17 × 7 1/4 × 16 3/8 in.) incl. projecting parts
Mass (approx.)	5.0 kg (11 lbs 4 oz)

### Supplied accessories

- Audio cord (2 phono plugs – 2 phono plugs) (1)
- CD booklet holder (1)

Design and specifications are subject to change without notice.

## Index

**A, B**

- AMS 10
- Automatic Music Sensor 10

**C, D**

- Connecting 4
- Continuous Play 8

**E, F, G**

- Erasing programs 13

**H**

- Handling CDs 15
- Hookups overview 4

**I**

- Inserting CDs 5

**J, K**

- JOG dial 5, 8

**L, M, N, O**

- Locating
  - a specific track 10
  - a specific point 10
  - by monitoring 10
  - by observing the display 10
  - discs 10
  - using AMS 10

**P, Q**

- Playback
  - Continuous Play 8
  - Program Play 12
  - Repeat Play 11
  - Shuffle Play 11
- Plus One Play 14
- Program
  - changing 13
  - checking 13
  - erasing 13

**R**

- Repeating 11
- Rotary table 5

**S**

- Searching. *See* Locating
- Selecting a disc 10
- Shuffle Play
  - on all discs 11
  - on one disc 11
- Specifying the next disc 10

**T**

- Troubleshooting 16

**U, V, W, X, Y, Z**

- Unpacking 4

## Names of controls

**Buttons**

- CHECK 13
- CLEAR 13
- CONTINUE 8
- PLUS ONE 14
- PROGRAM 12
- REPEAT 11
- SHUFFLE 11
- ⏮⏪⏩⏭ 10
- ▷ 9
- ⏸ 9
- 9

**Switches**

- POWER 5

**Jacks**

- LINE OUT 5

**Others**

- Disc slots 6
- Display 9
- Front cover 5
- JOG dial 5, 8
- Rotary table 5



