SONY

3-249-678-**34**(1)

Stereo Headset

Operating Instructions
사용설명서
使用說明書

DR-260USB

* 3 2 4 9 6 7 8 3 4 * (1)

© 2003 Sony Corporation Printed in Malaysia

English

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

CE mark

The validity of the CE marking is restricted to only those countries when it is legally enforced, mainly in the countries EEA (European Economic Area).

- Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and / or other countries.
- IBM and PC/AT are registered trademarks of International Business Machines Corporation.
- Pentium is a trademark or registered trademark of Intel Corporation.
- In this manual, Microsoft® Windows® XP Home Edition and Microsoft® Windows® XP Professional are referred to as Windows XP.
- In this manual, Microsoft® Windows® 2000 Professional is referred to as Windows 2000.
- In this manual, Microsoft® Windows® Millennium Edition is referred to as Windows Me.
- In this manual, Microsoft® Windows® 98 Second Edition is referred to as Windows 98SE.
- All other names of systems and products are trademarks or registered trademarks of their respective owners. ™ and ® marks are omitted in this manual.

Welcome!

Thank you for purchasing the Sony DR-260USB Stereo Headset. Before operating the unit, please read this manual thoroughly and retain it for future reference.
Some features are:
- Designed for comfortable, long term use.
- Digital transmission via USB connection preventing noise from your computer.
- Handy operation via USB Audio Box functions, such as headphone volume, microphone volume, and muting.
- Flexible Boom microphone design for reduced noise and easy adjustment and positioning in front of your mouth.
- Practical long cord for both headphone and Dedicated USB cable for use anywhere regardless of your computer's location.

Specifications

Stereo Headset DR-260DP

Cord	3 m (9 ft. 10 1/8 in.)
Plug	Gold plated stereo mini plug (for headphone)
	Gold plated mini plug (for microphone)
Mass	Approx. 90 g (3.18 oz.) (without cord)

Receiver

Type	Open air dynamic
Driver unit	30 mm (1 3/16 in.) (CCAW Voice Coil), dome type
Maximum input power	1,000 mW (IEC*1)
Impedance	24 Ω at 1 kHz
Sensitivity	100 dB/mW
Reproduction frequency range	40 - 20, 000 Hz

Microphone

Design	Flexible Boom microphone
Type	Electret condenser
Open circuit voltage level	-40 dB (0 dB = 1 V/Pa)
Effective frequency range	20 - 20, 000 Hz

USB Audio Box UAB-260

Frequency range	20 - 20,000 Hz (headphone)
	100 - 10,000 Hz (microphone)
Input / Output jacks	Output for headphone (mini jack/stereo) Impedance load : 16 - 40 Ω
	Input for microphone (mini jack/monaural) Plug-in-power system
	Dedicated USB jack
Power supply	USB bus power compliant (5 V, 100 mA)
Dimensions (excluding projection)	Approx. 53×20×92 mm (w/h/d) (2 1/8 × 3/4 × 3 5/8 in.)
Mass	Approx. 40 g (1.4 oz.)
Operating environment	Compliant computer : IBM PC/AT or compatible computers
	Compliant OS : Windows 98 Second Edition/Windows 2000 Professional/Windows Millennium Edition/ Windows XP Home Edition/Windows XP Professional (manufacturer installed)
	CPU: Pentium II 266 MHz or better
	USB port*2
Supplied accessories	Dedicated USB cable (1)
	Operating instructions (1)

- For the operating environment mentioned above, the headset is not guaranteed to operate with all computers.
- The headset is not guaranteed to operate with home built computers, operating systems that are personally up-graded or multiple operating systems.
- The headset is not guaranteed to operate with functions such as system suspend, sleep and hibernation, on all computers.

*1 IEC (International Electronic Committee) tested.
*2 The USB Audio Box supports USB 2.0. (previously USB 1.1)

Design and specifications are subject to change without notice.

Identifying parts

Headset DR-260DP

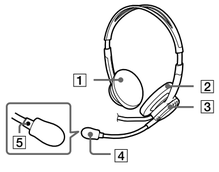

USB Audio Box UAB-260

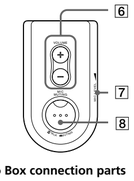

USB Audio Box connection parts

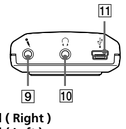

1 **Ear pad (Right)**
2 **Ear pad (Left)**
3 **Microphone adjuster**
Adjust the position of the microphone by turning the adjuster.
4 **Microphone with wind screen**
5 **○ mark**
6 **PHONE VOLUME + / - button (for headphone)**
Adjust the volume level of the headphone.
7 **MIC LEVEL (for microphone)**
Adjust the volume level of the microphone.
8 **MIC MUTING button**
TALK : The microphone is set to TALK mode.
MUTING : The microphone is set to MUTING mode.
9 **Microphone jack (Plug-in-power system)**
10 **Headphone jack**
11 **Dedicated USB jack**

Step 1 : Connection

Connect your USB Audio box and computer with the supplied USB cable.



Notes
- The headset supports the USB 2.0 version (previously USB 1.1 version.)
- The headset is not guaranteed to operate with a USB hub or USB extension cable. Use the dedicated USB cable.

Step 2 : Installing the USB driver

USB drivers are included in operating systems if you are using Windows 98SE, Me, 2000, and XP. USB drivers will be installed when the system is connected to the computer for the first time. Follow the on-screen instructions to install. For details, refer to the manual of your computer.

Note
When connecting to different USB ports, you may have to install USB drivers.

For Windows 98SE

When the system is connected to the computer, **[Add New Hardware Wizard]** is displayed and the installation of the device driver automatically starts.
USB Composite Device, USB Human Interface Device and USB Audio Device are installed.
Install each USB driver following the on-screen instructions.
You may need the Windows 98SE CD-ROM to install the drivers.

The following explains the steps of installing the USB Composite Device as an example. Install the USB Human Interface Device and USB Audio Device in the same way.

1 Check that the **[USB Composite Device]** is displayed in the **[This wizard searches for new drivers for:]** window, and click **[Next]**.
2 Check that the **[Search for the best driver for your device. (Recommended).]**check box is selected, and click **[Next]**.
3 **[Windows will search for new drivers in its driver database on your hard drive, and in any of the following selected locations.]** is displayed, and click **[Next]**.

If the Windows 98SE CD-ROM is required, insert it in the CD-ROM drive and select CD-ROM drive.

4 **[Windows driver file search for the device:]** is displayed. check that **[USB Composite Device]** is displayed, and click **[Next]**.
5 When **[USB Composite Device Windows has finished installing the software that your new hardware device requires.]** is displayed, click **[Finish]**.

For Windows Me

When the system is connected to the computer, **[Add New Hardware Wizard]** is displayed and the installation of the device driver automatically starts.
USB Composite Device, USB Human Interface Device and USB Audio Device are installed.
Install each USB driver following the on-screen instructions.

The USB Composite Device and USB Human Interface Device are installed automatically. Install the USB Audio Device following the steps below.

1 Check that the **[USB Audio Device]** is displayed in **[Windows has found the following new hardware:]** window, and check that the **[Automatic search for a better driver (Recommended)]** check box is selected and click **[Next]**.
2 The USB Audio device is installed.
3 When **[USB Audio Device Windows has finished installing the new hardware device.]** is displayed, click **[Finish]**.

For Windows 2000 and XP

When the system is connected to the computer, the USB Composite Device, USB Human Interface Device and USB Audio Device are installed automatically.

Setting of music CD replay

This setting is necessary when playing back a music CD in the CD-ROM drive.
Follow the instructions below according to your operating system and click the check box of **[Enable digital CD audio for this CD-ROM device]**.

For Windows 98SE

Click the **[Start]** menu and select **[Settings]**, **[Control Panel]**, **[Multimedia]**, and **[CD Music]**.

For Windows Me

Click the **[Start]** menu and select **[Settings]**, **[Control Panel]**, **[System]** and **[Device Manager]**. Then double-click **[CD-ROM]** to select the CD-ROM drive for replaying the music and click **[Properties]**, and then click **[Properties]** again.

For Windows 2000

Click the **[Start]** menu and select **[Settings]**, **[Control Panel]**, **[Sound and Multimedia]**, and **[Hardware]**. Then select the CD-ROM drive for replaying the music and click **[Properties]**, and then click **[Properties]** again.

For Windows XP

Click the **[Start]** menu and select **[Control Panel]**, **[Sounds, Speech, and Audio Devices]**, **[Sounds and Audio Devices]**, and **[Hardware]**. Then select the CD-ROM drive for replaying the music and click **[Properties]**, and then click **[Properties]** again.

How to use

1 **Connect the headphone plug (black) to the headphone jack and connect the microphone plug (pink) to the microphone jack.**



2 **Wear the headset marked Ⓡ on your right ear and the one marked Ⓛ on your left ear.**

3 **Position the microphone in front of your mouth by turning the Microphone adjuster.**

Adjusting the MIC LEVEL

Check the level of MIC LEVEL after recording with the **[Sound Recorder]** software pre-installed in your Windows.
Adjust MIC LEVEL of the USB Audio Box when the volume level is too high or too low.

For Windows 98SE/Me/2000

Click the **[Start]** menu, select **[Programs]**, **[Accessories]**, **[Entertainment]**, and click **[Sound Recorder]**.

For Windows XP

Click the **[Start]** menu, select **[All Programs]**, **[Accessories]**, **[Entertainment]**, and click **[Sound Recorder]**.

Precautions

On Safety

- Listening with the headphones at high volume may affect your hearing. For traffic safety, do not use while driving or cycling.
- Be careful not to use the headphone at too loud a volume level. Otherwise, you may have audio feedback (a howling effect) as the microphone picks up the loud sound from the headphone unit.
- Do not drop your headset or subject it to external shock, as it may cause a malfunction.
- Do not disassemble or attempt to open any parts of the system.
- Grasp the plug part of the dedicated USB cable or headset cord when you disconnect from the connectors or jacks.
- After operating the headset with the dedicated USB cable or headset cord, disconnect the USB cable from the computer if the headset is not to be used for an extended period.
- Do not use alcohol, benzene, or thinner to clean the cabinet.

Do not place the system in any of the following locations.

- Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
- Bathroom or other high-humidity locations
- Although this system is magnetically shielded, do not leave recorded tapes, watches, personal credit cards or floppy disks using magnetic coding in front of the system for an extended period of time.

On headset

Act considerately
When the volume is too high, the sound leaks outside the headset. Be careful not to raise the volume too high that it bothers people around you. There is a tendency to raise the volume when using in noisy places. However, the volume should be kept at a level where you can respond when called while listening to the headset.

On ear pads and wind screen

The ear pads and wind screen are replaceable. Replace them when they are worn out. To replace the ear pads and wind screen, consult your nearest Sony dealer.

If you have any questions or problems concerning your system that are not covered in this manual, please consult your nearest Sony dealer.

Troubleshooting

Sound of the headphone is low.

❒ The headphone plug is not connected to the jack properly.
→ Connect the headphone plug properly.

❒ The **Volume Control** of your computer or the volume level of the music playback software is turned down.
→ Adjust the **Volume Control**.
→ Turn up the volume level of the music playback software.

There is no sound from the headphone.

❒ The dedicated USB cable is not connected to your computer.
→ Connect the dedicated USB cable to your computer.

❒ The headphone plug is not connected to the headphone jack.
→ Connect the headphone plug to the headphone jack.

❒ The system is connected while music software is being replayed.
→ Stop playback of the music software and start again.

❒ The audio replaying device of your computer is not set correctly.
→ For Windows 98SE
Select **[Audio]** in **[Multimedia Properties]**, and select **[USB Audio Device]** for **[Preferred device]** in the **Playback** menu.
→ For Windows Me
Select **[Audio]** in **[Sounds and Multimedia Properties]**, and select **[USB Audio Device]** for **[Preferred device]** in the **Sound Playback** menu.
→ For Windows 2000
Select **[Audio]** in **[Sounds and Multimedia Properties]**, and select **[USB Audio Device]** for **[Preferred device]** in the **Sound Playback** menu.
→ For Windows XP
Select **[Audio]** in **[Sounds and Audio Devices Properties]**, and select **[USB Audio CODEC]** for **[Default device]** in the **Sound playback** menu.

❒ The **Volume Control** of your computer or the music playback software etc, is set to MUTE.
→ Unset MUTE.

❒ Your computer does not recognize the headset as a USB device.
→ Restart your computer.

❒ The CD-ROM drive of your computer does not support the digital play function of WDM.
→ Use a CD-ROM drive that supports the digital play function of WDM.

Sound of the headphone and recorded sound are disrupted.

❒ The CPU of your computer is overloaded.
→ Exit other applications.

❒ Other USB devices are connected to your computer and being operated simultaneously.
→ Quit operating other USB devices.

You cannot record sound from the microphone.

❒ The microphone plug is not connected to the microphone jack.
→ Connect the microphone plug to the microphone jack.

❒ The MIC MUTING button is set to Muting mode.
→ Set the MIC MUTING button to TALK mode.

❒ The audio recording device of your computer is not set correctly.
→ For Windows 98SE
Select **[Audio]** in **[Multimedia Properties]**, and select **[USB Audio Device]** for **[Preferred device]** in the **Recording** menu.
→ For Windows Me
Select **[Audio]** in **[Sounds and Multimedia Properties]**, and select **[USB Audio Device]** for **[Preferred device]** in the **Sound Recording** menu.
→ For Windows 2000
Select **[Audio]** in **[Sounds and Multimedia Properties]**, and select **[USB Audio Device]** for **[Preferred device]** in the **Sound Recording** menu.
→ For Windows XP
Select **[Audio]** in **[Sounds and Audio Devices Properties]**, and select **[USB Audio CODEC]** for **[Default device]** in the **Sound recording** menu.

Recorded sound is low.

❒ The microphone plug is not connected to the microphone jack properly.
→ Connect the microphone plug properly.

❒ The microphone is away from your mouth.
→ Position the microphone in front of your mouth.

❒ MIC LEVEL is turned down.
→ Turn up MIC LEVEL.

There is noise in recorded sound.

❒ There are electrical wires, fluorescent lights or mobile phones near the headset (especially the microphone.)
Move away from any possible sources of electromagnetic interference.

Recorded sound is distorted.

❒ MIC LEVEL is set too high.
→ Decrease the level of MIC LEVEL.

For details on the operation of your computer, refer to the operating instructions of your computer.

There can be some breakdowns that cannot be solved even with Troubleshooting. In such cases, contact your nearest Sony dealer.

한국어

경고

화재나 감전의 위험이 있으므로 장치를 비나 습기에 노출되지 않도록 하십시오.

화재나 감전 위험을 예방하기 위해 장치 위에 꽃병과 같이 액체로 채워진 물건을 올려 놓지 마십시오.

캐비스를 열면 감전의 위험이 있습니다. 서비스는 자격이 있는 기술자에게 의뢰하십시오.

CE 마크
CE 마크의 효력은 법으로 이를 규정한 국가에서만 인정되며 주로 EEA(유럽 경제 지역) 내의 국가들이 이에 포함됩니다.

- Microsoft 및 Windows는 미국 및/또는 기타 국가에서 Microsoft Corporation의 상표 또는 등록 상표입니다.
- IBM 및 PC/AT는 International Business Machines Corporation의 등록 상표입니다.
- Pentium은 Intel Corporation의 상표 또는 등록 상표입니다.
- 본 설명서에서 Microsoft® Windows® XP Home Edition 및 Microsoft® Windows® XP Professional은 Windows XP로 표기됩니다.
- 본 설명서에서 Microsoft® Windows® 2000 Professional은 Windows 2000으로 표기됩니다.
- 본 설명서에서 Microsoft® Windows® Millennium Edition은 Windows Me로 표기됩니다.
- 본 설명서에서 Microsoft® Windows® 98 Second Edition은 Windows 98SE로 표기됩니다.
- 다른 모든 시스템, 제품 및 서비스 이름은 해당 소유자의 상표 또는 등록 상표입니다. 본 설명서에서 ™ 및 ® 표시는 생략되었습니다.

환영합니다!

Sony DR-260USB 스테레오 헤드셋을 구입해 주셔서 감사합니다. 장치를 작동하기 전에 이 설명서를 자세히 읽으십시오. 이 설명서는 나중에 참고할 수 있도록 잘 보관하십시오.
이 제품의 특징은 다음과 같습니다.
- 편안하게 장시간 사용할 수 있게 디자인되었습니다.
- USB 연결을 통한 디지털 전송으로 컴퓨터의 노이즈가 차단됩니다.
- USB 오디오 박스 기능을 통해 편리하게 헤드폰 및 마이크 볼륨을 조정하고 음소거할 수 있습니다.
- 유연하게 디자인된 붐 마이크는 노이즈를 줄이고 입 정면으로 마이크 위치를 쉽게 조정할 수 있습니다.
- 헤드폰과 전용 USB 케이블의 코드 길이가 충분하여 컴퓨터의 위치에 관계 없이 어디서나 편리하게 사용할 수 있습니다.

주요 제원

스테레오 헤드셋 DR-260DP

코드	3m
플러그	금도금 스테레오 소형 플러그(헤드폰용)
	금도금 소형 플러그(마이크용)
무게	약 90g(코드 제외)

수신기

종류	Open Air Dynamic
드라이버 장치	30mm (CCAW 음성 코일), 돔 형식
최대 입력 전원	1000mW(IEC*1)
임피던스	1kHz에서 24Ω
감도	100dB/mW
재생 주파수 범위	40 – 20000Hz

마이크

디자인	유연한 붐 마이크
종류	전기 콘덴서
개방 회로 전압 수준	−40dB(0 dB = 1 V/Pa)
유효 주파수 범위	20 – 20000Hz

USB 오디오 박스 UAB-260

주파수 범위	20 – 20000Hz(헤드폰)
	100 – 10000Hz(마이크)
입력 / 출력 단자	헤드폰 출력(미니 단자/스테레오) 임피던스 부하 : 16 – 40 Ω
	마이크 입력(미니 단자/모노) 플러그인 파워형 시스템
	전용 USB 단자
전원 공급	USB 버스 전원 규격(5V, 100mA)
크기(프로젝션 제외)	약 53×20×92mm(너비/높이/깊이)
무게	약 40g
작동 환경	호환 컴퓨터 : IBM PC/AT 또는 호환 컴퓨터
	호환 OS : Windows 98 Second Edition/ Windows 2000 Professional/ Windows Millennium Edition/ Windows XP Home Edition/ Windows XP Professional (제조업체 설치)
	CPU: Pentium II 266 MHz 이상
	USB 포트*2
부속품	전용 USB 케이블(1)
	사용 설명서(1)

- 위에서 설명한 사용 환경을 충족하는 경우에도 일부 컴퓨터에서는 헤드셋이 작동하지 않을 수 있습니다.
- 개인이 조립한 컴퓨터, 개인적으로 업그레이드한 운영 체제 또는 다중 운영 체제에서는 헤드셋이 작동하지 않을 수도 있습니다.
- 시스템 대기 모드, 절전 모드 및 최대 절전 모드와 같은 기능을 사용하는 경우 일부 컴퓨터에서는 헤드셋이 작동하지 않을 수도 있습니다.

*1 IEC(International Electronic Committee)에서 테스트되었습니다.
*2 USB 오디오 박스는 USB 2.0을 지원합니다. (이전에는 USB 1.1)

디자인 및 주요 제원은 사전 통보 없이 변경될 수 있습니다.

각 부품 명칭 및 위치

헤드셋 DR-260DP

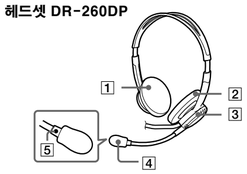

USB 오디오 박스 UAB-260

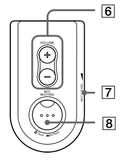

USB 오디오 박스 연결 부품



1 **이어 패드(오른쪽)**
2 **이어 패드(왼쪽)**
3 **마이크 조정기**
조정기를 돌려 마이크 위치를 조정합니다.
4 **윈드 스크린 장착 마이크**
5 **○ 마크**
6 **PHONE VOLUME + / – 버튼(헤드폰용)**
헤드폰의 볼륨을 조정합니다.
7 **MIC LEVEL(마이크용)**
마이크의 볼륨을 조정합니다.
8 **MIC MUTING 버튼**
TALK : 마이크가 TALK 모드로 설정됩니다.
MUTING : 마이크가 MUTING 모드로 설정됩니다.
9 **마이크 단자(플러그인 파워형 시스템)**
10 **헤드폰 단자**
11 **전용 USB 단자**

1단계: 연결

제공된 USB 케이블을 사용하여 USB 오디오 박스와 컴퓨터를 연결합니다.

참고
- 헤드셋은 USB 2.0 버전을 지원합니다(이전에는 USB 1.1 버전 지원).
- USB 허브 또는 USB 확장 케이블을 사용할 경우 헤드셋이 작동하지 않을 수도 있습니다. 전용 USB 케이블을 사용하십시오.

2단계: USB 드라이버 설치

Windows 98SE, Me, 2000 및 XP를 사용하는 경우 운영 체제에 USB 드라이버가 포함되어 있습니다. USB 드라이버는 시스템을 처음 컴퓨터에 연결할 때 설치됩니다. 화면의 지시에 따라 설치하십시오. 자세한 내용은 컴퓨터 사용 설명서를 참조하십시오.

참고
다른 USB 포트에 연결할 경우 USB 드라이버를 설치해야 할 수 있습니다.

Windows 98SE

시스템을 컴퓨터에 연결하면 **[새 하드웨어 추가 마법사]**가 표시되고 장치 드라이버 설치가 자동으로 시작됩니다.
USB 복합 기기, USB 휴면 인터페이스 장치 및 USB 오디오 장치가 설치됩니다.
화면의 지시에 따라 각 USB 드라이버를 설치하십시오.
드라이버를 설치하려면 Windows 98SE CD-ROM이 필요할 수 있습니다.

다음은 USB 복합 기기를 설치하는 단계를 예로 들어 설명합니다. USB 휴면 인터페이스 장치와 USB 오디오 장치를 같은 방법으로 설치합니다.

1 **[드라이버를 검색할 장치]** 창에서 **[USB 복합 기기]**가 표시되는지 확인하고 **[다음]**을 클릭합니다.
2 **[장치에 가장 알맞은 드라이버 검색(권장)]** 확인란이 선택되었는지 확인하고 **[다음]**을 클릭합니다.
3 **[새로운 드라이버를 찾기 위해 시스템의 하드 드라이브의 드라이버 데이터베이스 및 지정한 위치를 검색합니다]**가 표시되면 **[다음]**을 클릭합니다.

Windows 98SE CD-ROM을 요구하면 CD-ROM 드라이브에 이 디스크를 넣고 CD-ROM 드라이브를 선택하십시오.

4 **[드라이버를 찾을 장치]**가 표시되면 **[USB 복합 기기]**가 표시되는지 확인하고 **[다음]**을 클릭합니다.
5 **[USB 복합 기기 시스템의 새 하드웨어 장치에 필요한 소프트웨어의 설치를 마쳤습니다]**가 표시되면 **[마침]**를 클릭합니다.

Windows Me

시스템을 컴퓨터에 연결하면 **[새 하드웨어 추가 마법사]**가 표시되고 장치 드라이버 설치가 자동으로 시작됩니다.
USB 합성 장치, USB 휴면 인터페이스 장치 및 USB 오디오 장치가 설치됩니다.
화면의 지시에 따라 각 USB 드라이버를 설치하십시오.

USB 합성 장치 및 USB 휴면 인터페이스 장치가 자동으로 설치됩니다. 다음 단계에 따라 USB 오디오 장치를 설치하십시오.

1 **[다음 하드웨어를 찾았습니다]** 창에 **[USB 오디오 장치]**가 표시되는지 확인하고 **[더 나은 드라이버 자동 검색(권장)]** 확인란이 선택되었는지 확인하고 **[다음]**을 클릭합니다.
2 USB 오디오 장치가 설치됩니다.
3 **[USB 오디오 장치 새 하드웨어 장치 설치를 마쳤습니다]**가 표시되면 **[마침]**를 클릭합니다.

Windows 2000 및 XP

시스템을 컴퓨터에 연결하면 USB Composite 장치, USB 휴면 인터페이스 장치 및 USB 오디오 장치가 자동으로 설치됩니다.

음악 CD 재생 설정

이 설정은 CD-ROM 드라이브에서 음악 CD를 재생할 때 필요합니다.
운영 체제에 따라 아래의 지시를 따른 다음 **[이 CD-ROM 장치에서 디지털 CD 오디오 사용]** 확인란을 클릭하십시오.

Windows 98SE

[시작] 메뉴를 클릭한 다음 **[설정]**, **[제어판]**, **[멀티미디어]** 및 **[CD 음악]**을 차례로 선택합니다.

Windows Me

[시작] 메뉴를 클릭한 다음 **[설정]**, **[제어판]**, **[시스템]** 및 **[장치 관리자]**를 차례로 선택합니다. 그런 다음 **[CDROM]**을 두 번 클릭하여 음악을 재생할 CD-ROM 드라이브를 선택하고 **[등록 정보]**를 클릭한 후 **[등록 정보]** 탭을 클릭합니다.

다음 페이지에서 계속

Windows 2000

[시작] 메뉴를 클릭하고 **[설정]**, **[제어판]**, **[사운드 및 멀티미디어]**, **[하드웨어]**를 차례로 선택합니다. 그런 다음 음악을 재생할 CD-ROM 드라이브를 선택하고 **[등록 정보]**를 클릭한 후 **[등록 정보]** 탭을 클릭합니다.

Windows XP

[시작] 메뉴를 클릭하고 **[제어판]**, **[사운드, 음성 및 오디오 장치]**, **[사운드 및 오디오 장치]**, **[하드웨어]**를 차례로 선택합니다. 그런 다음 음악을 재생할 CD-ROM 드라이브를 선택하고 **[속성]**을 클릭한 후 **[속성]** 탭을 클릭합니다.

사용 방법

1 헤드폰 플러그(검정색)를 헤드폰 단자에 연결하고 마이크 플러그(핑크색)를 마이크 단자에 연결합니다.



2 오른쪽 귀와 왼쪽 귀에 각각 Ⓡ과 Ⓛ이 오도록 헤드셋을 착용합니다.

3 마이크 조정기를 돌려 마이크가 입 정면에 오도록 위치를 조정합니다.

MIC LEVEL 조정

Windows에 기본 설치된 **[녹음기]** 소프트웨어를 사용하여 녹음한 다음 MIC LEVEL 수준을 확인합니다.
볼륨이 너무 높거나 낮으면 USB 오디오 상자에서 MIC LEVEL을 조정합니다.

Windows 98SE/Me/2000

[시작] 메뉴를 클릭한 다음 **[프로그램]**, **[보조프로그램]**, **[엔터테인먼트]**를 선택하고 **[녹음기]**를 클릭합니다.

Windows XP

[시작] 메뉴를 클릭한 다음 **[모든 프로그램]**, **[보조프로그램]**, **[엔터테인먼트]**를 선택하고 **[녹음기]**를 클릭합니다.

주의사항

안전에 관한 주의

- 높은 볼륨으로 헤드폰을 들으면 청각에 영향을 미칠 수 있습니다. 교통 안전을 위해 운전 중이거나 자전거를 타는 중에는 사용하지 마십시오.
- 너무 큰 볼륨 레벨에서 헤드폰을 사용하지 않도록 주의하십시오. 그렇지 않으면 마이크가 헤드폰 장치로부터 큰 음량을 뿜아내어 청취 거리는 소리가 발생할 수 있습니다.
- 고장을 유발할 수 있으므로 헤드셋을 떨어뜨리거나 충격을 가하지 마십시오.
- 시스템 부품을 분해하거나 열지 마십시오.
- 커넥터나 단자에서 뺄 때는 전용 USB 케이블이나 헤드셋 코드의 플러그 부분을 잡고 빼십시오.
- 헤드셋에 전용 USB 케이블이나 헤드셋 코드를 연결하여 사용한 후 헤드셋을 오랜 시간 동안 사용하지 않으려면 컴퓨터에서 USB 케이블을 분리하십시오.
- 알코올, 벤젠 또는 신나를 사용하여 캐비닛을 청소하지 마십시오.

다음 장소에 시스템을 보관하지 마십시오.

- 열원 근처 또는 직사 광선이 비추는 곳, 먼지 또는 습기가 많은 곳 비를 맞거나 기계적 충격이 발생하는 곳에 보관하지 마십시오.
- 욕실이나 기타 습기가 많은 장소
- 시스템은 자기가 차단되어 있지만 오랜 시간 동안 시스템 앞에 마그네틱 코딩을 사용하는 녹음 테이프, 시계, 신용 카드 또는 플로피 디스크 등을 놓아 두지 마십시오.

헤드셋에 관한 주의

적당한 볼륨으로 사용하십시오.

볼륨이 너무 크면 소리가 헤드셋 밖으로 새어 나갑니다. 주변 사람들을 방해할 만큼 볼륨을 너무 높이지 않도록 주의하십시오. 소음이 심한 장소에서 사용할 때 혼히 볼륨을 높이는 경향이 있습니다. 그러나, 볼륨은 헤드셋으로 듣는 동안 불평을 때 응답할 수 있는 수준을 유지해야 합니다.

이어 패드와 윈드 스크린에 관한 주의

이어 패드와 윈드 스크린이 마모되면 가까운 소니 영업소에 문의하여 교체할 수 있습니다.

이 설명서에 포함되지 않은 시스템에 관한 문의 사항이나 문제가 있을 경우 가까운 소니 영업소에 문의하십시오.

문제 해결

헤드폰 소리가 너무 작습니다.

❒ 헤드폰 플러그가 단자에 올바르게 연결되지 않았습니다.
→ 헤드폰 플러그를 올바르게 연결하십시오.

❒ 컴퓨터의 **볼륨 조절**(Windows XP: **볼륨 컨트롤**)이나 음악 재생 소프트웨어의 볼륨이 낮습니다.
→ **볼륨 조절**(Windows XP: **볼륨 컨트롤**)을 조정하십시오.
→ 음악 재생 소프트웨어의 볼륨을 높이십시오.

헤드폰에서 소리가 나지 않습니다.

❒ 전용 USB 케이블이 컴퓨터에 연결되지 않았습니다.
→ 전용 USB 케이블을 컴퓨터에 연결하십시오.

❒ 헤드폰 플러그가 헤드폰 단자에 연결되지 않았습니다.
→ 헤드폰 플러그를 헤드폰 단자에 연결하십시오.

❒ 음악 소프트웨어가 재생되는 중에 시스템을 연결했습니다.
→ 음악 소프트웨어 재생을 중지하고 다시 시작하십시오.

❒ 컴퓨터의 오디오 재생 장치가 올바르게 설정되지 않았습니다.
→ Windows 98SE
[멀티미디어 등록 정보]에서 **[오디오]**를 선택한 다음 **재생** 메뉴에서 **[기본 설정 장치]**에 대해 **[USB 오디오 장치]**를 선택합니다.
→ Windows Me
[사운드 및 멀티미디어 등록 정보]에서 **[오디오]**를 선택한 다음 **소리 재생** 메뉴에서 **[기본 설정 장치]**에 대해 **[USB 오디오 장치]**를 선택합니다.
→ Windows 2000
[사운드 및 멀티미디어 등록 정보]에서 **[오디오]**를 선택한 다음 **소리 재생** 메뉴에서 **[기본 설정 장치]**에 대해 **[USB 오디오 장치]**를 선택합니다.
→ Windows XP
[사운드 및 오디오 장치 등록 정보]에서 **[음성]**를 선택하고 **음성 재생** 메뉴에서 **[기본 장치]**에 대해 **[USB Audio CODEC]**을 선택합니다.

❒ 컴퓨터나 음악 재생 소프트웨어의 **볼륨 조절**(Windows XP: **볼륨 컨트롤**)이 MUTE로 설정되었습니다.
→ MUTE 설정을 취소합니다.

❒ 컴퓨터에서 헤드셋을 USB 장치로 인식하지 않습니다.
→ 컴퓨터를 다시 시작합니다.

❒ 컴퓨터의 CD-ROM 드라이브가 WDM의 디지털 재생 기능을 지원하지 않습니다.
→ WDM의 디지털 재생 기능을 지원하는 CD-ROM 드라이브를 사용하십시오.

헤드폰의 사운드와 녹음 사운드가 끊깁니다.

❒ 컴퓨터의 CPU가 과부하 상태가 됩니다.
→ 다른 응용 프로그램을 종료합니다.

❒ 컴퓨터에 다른 USB 장치가 연결되어 동시에 작동합니다.
→ 작동 중인 다른 USB 장치를 종료합니다.

마이크로 사운드를 녹음할 수 없습니다.

❒ 마이크 플러그가 마이크 단자에 연결되지 않았습니다.
→ 마이크 플러그를 마이크 단자에 연결합니다.

❒ MIC MUTING 버튼이 음소거 모드로 설정되었습니다.
→ MIC MUTING 버튼을 TALK 모드로 설정합니다.

❒ 컴퓨터의 오디오 녹음 장치가 올바르게 설정되지 않았습니다.
→ Windows 98SE
[멀티미디어 등록 정보]에서 **[오디오]**를 선택한 다음 **녹음** 메뉴에서 **[기본 설정 장치]**에 대해 **[USB 오디오 장치]**를 선택합니다.
→ Windows Me
[사운드 및 멀티미디어 등록 정보]에서 **[오디오]**를 선택한 다음 **녹음** 메뉴에서 **[기본 설정 장치]**에 대해 **[USB 오디오 장치]**를 선택합니다.
→ Windows 2000
[사운드 및 멀티미디어 등록 정보]에서 **[오디오]**를 선택한 다음 **녹음** 메뉴에서 **[기본 설정 장치]**에 대해 **[USB 오디오 장치]**를 선택합니다.
→ Windows XP
[사운드 및 오디오 장치 등록 정보]에서 **[음성]**를 선택한 다음 **음성 녹음** 메뉴에서 **[기본 장치]**에 대한 **[USB Audio CODEC]**을 선택합니다.

녹음된 사운드가 낮습니다.

❒ 마이크 플러그가 마이크 단자에 올바르게 연결되지 않았습니다.
→ 마이크 플러그를 올바르게 연결하십시오.

❒ 마이크를 입에서 멀리하십시오.
→ 마이크를 입 앞에 배치하십시오.

❒ MIC LEVEL이 꺼져 있습니다.
→ MIC LEVEL을 높이십시오.

녹음된 사운드에 노이즈가 있습니다.

❒ 헤드셋(특히 마이크) 근처에 전기선, 형광등 또는 이동 전화가 있습니다.
→ 전자기 간섭이 발생하는 물체를 멀리 두십시오.

녹음된 사운드가 왜곡됩니다.

❒ MIC LEVEL이 너무 높게 설정되었습니다.
→ MIC LEVEL의 수준을 줄이십시오.

컴퓨터 사용 방법에 대한 자세한 내용은 컴퓨터 사용 설명서를 참조하십시오.

위에서 설명된 문제 해결 방법으로 문제를 해결할 수 없는 경우 가까운 소니 영업소에 문의하십시오.

中文

警告

為防止火災或漏電，請勿讓本機受雨淋或受潮。

為防止著火或觸電，切勿將盛滿液體的花瓶等物體放在設備上。

切勿擅自打開機殼，以免觸電。維修必須由專業技術人員進行。

CE 標誌

CE 標記的效力，僅限於那些對該標記有法律強制性規定的國家，主要為 EEA 國家（歐洲經濟區）。

- Microsoft 和 Windows 均為 Microsoft Corporation 在美國和／或其他國家的註冊商標或商標。
- IBM 和 PC/AT 均為 International Business Machines Corporation 的註冊商標。
- Pentium 為 Intel Corporation 的商標或註冊商標。
- 本手冊中，Microsoft® Windows® XP Home Edition 和 Microsoft® Windows® XP Professional 均被簡稱為 Windows XP。
- 本手冊中，Microsoft® Windows® 2000 Professional 被簡稱為 Windows 2000。
- 本手冊中，Microsoft® Windows® Millennium Edition 被簡稱為 Windows Me。
- 本手冊中，Microsoft® Windows® 98 Second Edition 被簡稱為 Windows 98SE。
- 本手冊所提及的所有其他系統和產品名稱均為各相應所有者的商標或註冊商標。本手冊中省略了 ™ 和 ®。

歡迎！

感謝您購買 Sony DR-260USB 立體聲耳機。使用本裝置之前請先仔細閱讀本說明書，並妥善保管以備今後參考。
特點：
- 使用舒適、經久耐用。
- 通過 USB 連接的數位傳輸可阻止電腦噪聲。
- 通過 USB 音頻盒可手動操作耳機音量、話筒音量和靜音等。
- 靈活的吊桿式話筒設計，可減低噪聲，並能在嘴前自由調節和定位。
- 耳機軟線和專用 USB 電纜線長而實用，無論您的電腦在何位置均可使用。

規格

立體聲耳機 DR-260DP

軟線	3 m
插頭	鍍金立體聲迷你插頭（耳機用插頭） 鍍金迷你插頭（話筒用插頭）
質量	約 90 g（軟線除外）

受話器

類型	戶外動態
驅動單元	30 mm（CCAW 音圈）， 穹頂型
最大輸入功率	1000 mW（IEC*1）
阻抗	1 kHz 時 24 Ω
靈敏度	100 dB/mW
複製頻率範圍	40–20000 Hz

話筒

設計	靈活的吊桿式話筒
類型	電解電容
開路電壓水平	−40 dB（0 dB＝1 V/Pa）
有效頻率範圍	20–20000 Hz

USB 音頻盒 UAB-260

頻率範圍	20–20000 Hz（耳機） 100–10000 Hz（話筒）
輸入/輸出插孔	耳機輸出（迷你插孔/立體聲） 阻抗負荷：16–40 Ω 話筒輸入（迷你插孔/單聲道） 插入式電源系統
	專用 USB 插孔
電源	符合 USB 總線電源（5V，100 mA）
尺寸（突出部分除外）：	約 53x20x92 mm（寬/高/深）
質量	約 40g
操作環境	相容電腦： IBM PC/AT 或相容電腦
	相容作業系統： Windows 98 Second Edition/ Windows 2000 Professional/ Windows Millennium Edition/ Windows XP Home Edition/ Windows XP Professional （供應商已安裝）
	CPU：Pentium II 266 MHz 或更高級
	USB 端口*2
隨機附件	專用 USB 電纜（1） 使用說明書（1）

- 鑒於上述作業環境，本耳機不保証適用於所有電腦。
- 本耳機不保証適用於自行組裝的電腦、自行升級的作業系統或多作業系統環境。
- 本耳機不保証適用於電腦某些功能環境，如系統暫停、睡眠和休止等。

*1 通過 IEC（國際電工委員會）檢測。
*2 USB音頻盒支援 USB 2.0.(此前是 USB 1.1.)

設計和規格可隨時更改，無需事先通知。

識別部件

耳機 DR-260DP

USB 音頻盒 UAB-260

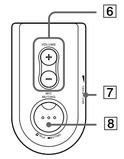

USB 音頻盒連接部位



1 耳墊（右）
2 耳墊（左）
3 話筒調節器
轉動調節器以調節話筒位置。
4 擋風話筒
5 ○ 標記
6 耳機音量 ＋/－ 鍵（耳機用）
調節耳機的音量電平。
7 MIC LEVEL（對於話筒）
調節話筒的音量電平。
8 MIC MUTING 鍵
TALK：話筒設置到 TALK（通話）模式。
MUTING：話筒設置到 MUTING（靜音）模式。
9 話筒插孔（插入式電源系統）
10 耳機插孔
11 專用 USB 插孔

步驟 1：連接

用附贈的 USB 電纜將您的 USB 音頻盒與電腦連接。



注意事項：
- 本耳機支援 USB 2.0 版（之前是 USB 1.1 版）
- 耳機不保証可用於任何 USB 集線器或 USB 延長電纜。請使用專用 USB 電纜。

步驟 2：安裝 USB 驅動程式

若您使用的是 Windows 98SE，Me，2000 以及 XP，USB 驅動程式就包含在這些作業系統中。USB 驅動程式將於本裝置與電腦首次連接時進行安裝。根據螢幕顯示的向導安裝。詳細資訊，請參閱您的電腦使用說明書。

注意事項：
與不同的 USB 埠連接時，您可能需要安裝 USB 驅動程式。

對於 Windows 98SE

當本裝置與電腦連接時，將顯示[**新增硬體精靈**]，自動啓動設備驅動程式安裝。USB Composite Device，USB 人工介面裝置和 USB Audio Device 將被安裝。根據螢幕指示，安裝各 USB 驅動程式。
您可能需要用 Windows 98SE CD-ROM 安裝驅動程式。

以下舉例說明 USB Composite Device 安裝步驟。用相同的方法安裝 USB 人工介面裝置和 USB Audio Device。

1 確認[USB Composite Device]顯示在[**此精靈會為下列裝置搜尋新的驅動程式**]窗口中，按一下[**下一步**]。
2 選擇[**搜尋裝置的最適用的驅動程式，建議使用**]核取方塊後，按一下[**下一步**]。
3 顯示[**Windows 會在硬碟及以下選擇的位置資料庫搜尋新驅動程式**]，按一下[**下一步**]。

如果要求用 Windows 98SE CD-ROM，將其插入 CD-ROM 光碟機，選擇 CD-ROM 光碟機。

4 螢幕將顯示[**Windows 驅動程式檔案搜尋裝置**]。螢幕顯示[USB Composite Device]後，按一下[**下一步**]。
5 當顯示[USB Composite Device Windows 已經安裝好新硬體裝置需要的軟體]後，按一下[**完成**]。

對於 Windows ME

當本裝置與電腦連接時，將顯示出[**新增硬體精靈**]，並自動啓動設備驅動程式安裝。USB Composite Device、USB 人工介面裝置和 USB Audio Device 將被安裝。根據以下螢幕指示，安裝各 USB 驅動程式。

USB Composite Device 和 USB 人工介面裝置將被自動安裝。按如下步驟安裝 USB Audio Device：

1 確認[USB Audio Device]顯示在[**此精靈已經找到下列的新硬體**]窗口，選擇[**自動搜尋更好的驅動程式（建議使用）**]核取方塊後，按一下[**下一步**]。
2 USB 音頻驅動程式已安裝。
3 當顯示[USB Audio Device Windows 已經安裝好新的硬體裝置]後，按一下[**完成**]。

對於 Windows 2000 和 XP

當本裝置與電腦連接時，USB Composite Device、USB 人性化介面裝置和 USB 音效裝置將被自動安裝。

設置音樂 CD 播放

當要在 CD－ROM 光碟機中播放音樂 CD，必須要進行此設置。
根據您的作業系統，按以下指示操作，並按一下 [**在此 CD-ROM 裝置上啓動數位 CD 音訊**](Windows 2000/XP: [**啓用這個 CD-ROM 的數位 CD 音訊**]) 核取方塊。

對於 Windows 98SE

按一下[**開始**]選單，選擇[**設定**]，[**控制台**]，[**多媒體**]，以及[**CD 音樂**]。

對於 Windows ME

按一下[**開始**]選單，選擇[**設定**]，[**控制台**]，[**系統**]和[**裝置管理員**]。然後按兩下[CDROM]來選擇播放音樂的 CD-ROM 光碟機，然後按一下[**內容**]，然後再按一下[**內容**]。

對於 Windows 2000

按一下[**開始**]選單，選擇[**設定**]，[**控制台**]，[**聲音及多媒體**]，以及[**硬體**]，然後選擇播放音樂的 CD-ROM 光碟機，按一下[**內容**]，然後再按一下[**內容**]。

對於 Windows XP

按一下[**開始**]選單，選擇[**控制台**]，[**聲音、語音、和音訊裝置**]，[**聲音和音訊裝置**]，以及[**硬體**]。然後選擇播放音樂的 CD-ROM 光碟機，按一下[**內容**]，然後再按一下[**內容**]。

如何使用

1 將耳機插頭（黑色）接入耳機插孔，話筒插頭（粉紅色）接入話筒插孔。

2 將標有 Ⓡ 的耳機戴在右耳，標有 Ⓛ 的戴在左耳。

3 轉動話筒調節器，將話筒定位在您的嘴部前方。

調節 MIC LEVEL

用 Windows 中預裝的[**錄音程式**](Windows 2000/XP: [**錄音機**])錄好音後，檢查 MIC LEVEL 的電平。
若音量電平太高或太低，則調節 USB 音頻盒上的 MIC LEVEL。

對於 Windows 98SE/ME/2000

按一下[**開始**]選單，選擇[**程式集**]，[**附屬應用程式**]，[**視聽娛樂**]，然後按一下[**錄音程式**]。

對於 Windows XP

按一下[**開始**]選單，選擇[**所有程式**]，[**附屬應用程式**]，[**娛樂**]，然後按一下[**錄音機**]。

警告

安全

- 戴著耳機用很高的聲音收聽可能會影響您的聽力。為了交通安全，在駕車和騎車時請勿使用耳機。
- 注意使用耳機時請勿用太高的音量。否則，當麥克風收到來自耳機的很大的聲音時您會聽到音頻反饋（嘯叫聲）。
- 請勿讓耳機跌落或受外力震動，否則可能會導致故障。
- 請勿拆卸或試圖打開任何系統部件。
- 在將專用 USB 電纜或耳機線拔離連接器或插孔時，請抓住插頭部位。
- 在用專用的 USB 電纜或耳機線使用耳機後，若之後有較長一段時間不再用耳機，請將 USB 電纜與電腦脫離連接。
- 請勿用酒精、苯或稀釋劑清潔耳機外殼。

請勿將耳機放在以下任何地方。

- 請勿將耳機靠近熱源，或置於直射陽光、灰塵大、潮濕、雨淋或機械震動的地方。
- 浴室或其它濕度高的地方
- 雖然本裝置有磁屏蔽，但請勿在它前面長時間擺放那些使用磁性編碼的錄音帶、手錶、個人信用卡或軟碟等。

耳機
行為周到

若音量過高，聲音會泄漏到耳機以外。小心不要將音量調到過高，打擾你周圍的人。使用者通常會在吵鬧的環境里提高音量，但是在收聽耳機時應該將音量保持在能聽到電話鈴聲的電平上。

耳墊和風擋

耳機和風擋均可更換。若它們已磨破，請予以更換。請洽離您附近的 Sony 代理商更換耳墊和風擋。

若您對本裝置有任何疑問或問題而本手冊未提及，請向離您最近的 Sony 代理商咨詢。

故障排除

耳機聲音低。

❒ 耳機插頭未與插孔正確連接。
→ 正確連接耳機插頭。

❒ 電腦的**音量控制**或音樂播放軟體的音量處於調低狀態。
→ 調整**音量控制**。
→ 將音樂播放軟體音量調高。

耳機沒聲音。

❒ 專用 USB 電纜未與您的電腦連接。
→ 將專用 USB 電纜與您的電腦連接。

❒ 耳機插頭未與耳機插孔連接。
→ 將耳機插頭接入耳機插孔。

❒ 在音樂軟體正在播放時連接本裝置。
→ 停止音樂軟體播放，重新啓動。

❒ 您電腦的音頻播放設備未正確設置。
→ 對於 Windows 98SE
在[**多媒體 內容**]中選擇[**音效**]，並在 **播放** 選單中將[**喜歡使用的裝置**]選爲[USB Audio Device]。
→ 對於 Windows Me
在[**聲音與多媒體 內容**]中選擇[**音效**]，並在 **播放** 選單中將[**喜歡使用的裝置**]選爲[USB **喇叭**]。
→ 對於 Windows 2000
在[**聲音及多媒體 內容**]中選擇[**音訊**]，並在 **音效播放** 選單中將[**慣用裝置**]選爲[USB **音效裝置**]。
→ 對於 Windows XP
在[**聲音及音訊裝置 內容**]中選擇[**音訊**]，並在 **音效播放** 選單中將[**預設裝置**]選爲[USB Audio CODEC]。

❒ 您電腦的**音量控制**或音樂軟體播放已設置成 MUTE（靜音）。
→ 取消 MUTE 設置。

❒ 您的電腦未將耳機識別爲 USB 設備。
→ 重新啓動您的電腦。

❒ 您電腦的 CD-ROM 光碟機不支援 WDM 數位播放功能。
→ 使用支援 WDM 數位播放功能的 CD-ROM 光碟機。

耳機聲音和錄下來的聲音有噪聲。

❒ 您的電腦 CPU 過載。
→ 退出其它應用程式。

❒ 您的電腦連接有其他的 USB 裝置且被同時操作。
→ 請停止操作其他 USB 裝置。

您無法錄下話筒聲音。

❒ 話筒插頭未插入話筒插孔。
→ 將話筒插頭插入話筒插孔。

❒ MIC MUTING 鍵設置爲靜音模式。
→ 將 MIC MUTING 鍵設置爲 TALK（通話）模式。

❒ 您電腦的音頻錄音設備未正確設置。
→ 對於 Windows 98SE
在[**多媒體 內容**]中選擇[**音效**]，並在 **錄音** 選單中將[**喜歡使用的裝置**]選爲[USB Audio Device]。
→ 對於 Windows Me
在[**聲音與多媒體 內容**]中選擇[**音效**]，並在 **錄音** 選單中將[**喜歡使用的裝置**]選爲[USB **叭**]。
→ 對於 Windows 2000
在[**聲音及多媒體 內容**]中選擇[**音訊**]，並在 **音效錄音** 選單中將[**慣用裝置**]選爲[USB **音效裝置**]。
→ 對於 Windows XP
在[**聲音及音訊裝置 內容**]中選擇[**音訊**]，並在 **音效錄音** 選單中將[**預設裝置**]選爲[USB Audio CODEC]。

錄下來的聲音太低。

❒ 話筒插頭未與話筒插座正確連接。
→ 將話筒插頭正確接入。

❒ 話筒距您的嘴太遠。
→ 將話筒位置調至嘴前。

❒ MIC LEVEL 處於調低狀態。
→ 調高 MIC LEVEL。

錄下來的聲音有噪聲。

❒ 耳機（尤其是話筒）附近有電線、熒光燈或手機。
→ 將任何可能的電磁干擾源移開。

錄下來的聲音失真。

❒ MIC LEVEL 設置過高。
→ 降低 MIC LEVEL 電平。

有關您的電腦操作細節，請參閱您的電腦使用說明書。

有些故障也許無法通過上述指導排除。若遇到此類情況，請洽離您最近的索尼代理商。